

FLEXFLO[®]

Peristaltic Metering Pump



A3

1.0	Introduction	4	10.0	Industrial Protocols	37
1.1	What's in the box	5	10.1	Control and Status Mapping for Profibus and EtherNet/IP	37
1.2	Storage and Handling	5	10.2	Control and Status Mapping for Modbus TCP	40
2.0	Engineering Specifications	6	10.3	EtherNet/IP	43
2.1	Output vs fluid viscosity	7	10.4	Modbus TCP	44
3.0	Materials of Construction	8	10.5	Profibus DP	45
3.1	Wetted Components	8	11.0	Tubing	46
3.2	Non-Wetted Components	8	11.1	Tube Information	46
4.0	Features	9	11.2	Tube Calibration	47
4.1	Agency Listings	9	12.0	Settings	48
5.0	Installation	10	12.1	Pump Name	48
5.1	Mounting Location	10	12.2	Unit of Volume	49
5.2	Mounting Dimensions	11	12.3	Unit of Time	50
5.3	Input Power Connections	12	12.4	Chemical Name	51
5.4	Wiring Terminals and I/O Schematics	13	12.5	Max Motor RPM Cut-off	52
6.0	Layout	14	12.6	Language	53
6.1	Home Screen Layout / Quick Tab Setting	14	12.7	Pump Rotation Direction	54
6.2	App Screen Layout	14	12.8	Resume Operation upon Start-Up	55
6.3	M12 Connectors	15	12.9	Factory Reset	56
6.4	IO Connectors	15	12.10	System Time	57
6.5	M12 Connectors Description	16	12.11	Display Flow Rate, RPM, Speed, Input	58
7.0	Startup	18	13.0	System	59
7.1	Powering On/Off the pump	18	13.1	System Information	59
7.2	Welcome Screen	19	13.2	Firmware Update	60
8.0	Input Setup	20	14.0	Pump Maintenance	61
8.1	Manual Input	20	14.1	Routine Inspection and Maintenance	61
8.2	4-20 mA Input	21	14.2	How to Clean and Lubricate the Pump	62
8.3	Frequency Input	22	14.3	Remove Pump Head /Tubing Replacement	63
8.4	Pulse Input	23	14.4	Pump Head and Roller Exploded Views	63
8.5	Remote Start/Stop and Secondary Input	24	14.5	Tube Assembly Care and Use Guide	63
8.6	Flow Verification (FVS) (Quick Setting Opt)	25	14.6	TFD (Tube Failure Detection)	64
8.7	Prime the Pump	26	14.7	Predictive Tube Failure	65
8.8	Auto Prime	27	15.0	Replacement Parts	66
8.9	Manual Cycle Adjust	28	15.1	Replacement Parts	66
8.10	Dispensing	29	15.2	Tube Selection Matrix	67
8.11	Time of Day	30	16.0	Accessories	68
8.12	Revolution Alarm	31	17.0	Troubleshooting and Error Codes	70
8.13	Passcode	32	18.0	Warranty	71
8.14	Local Only Mode (Via Quick Tab Setting)	33	19.0	Certificate of Conformance	72
9.0	Output Setup	34	APPENDIX A: ACRONYMS	74	
9.1	4-20mA Output	34	APPENDIX B: MODEL NUMBER MATRIX	75	
9.2	Frequency Output	35			
9.3	Relay & Contact Output	36			

READ THE ENTIRE OPERATING MANUAL PRIOR TO INSTALLATION AND USE.



+1 (714) 893 - 8529



sales@blue-white.com



customerservice@blue-white.com



5300 Business Drive
Huntington Beach, CA 92649

Congratulations on purchasing the A3 FLEXFLO® variable speed Peristaltic Metering Pump.

Your FLEXFLO® A3 pump is pre-configured for the tubing that shipped with your metering pump. The tubing assembly has an Identification number printed for easy re-order.

Please Note: Your new pump has been pressure tested at the factory with clean water before shipping. You may notice trace amounts of clean water in the pre-installed tube assembly. This is part of our stringent quality assurance program at Blue-White Industries.

For more information please visit us at: www.blue-white.com

For videos and tutorials please visit as at:
<https://www.blue-white.com/resources/videos>

1.1 What's In The Box

The following items are included with every A3 peristaltic metering pump:

A3 Peristaltic Pump
With 6ft (1.8m) power cord



QR Code link to Support Hub (Instruction Manual, Datasheet, Videos, Parts, Accessories)

www.blue-white.com/support-hub-a3/



Standard Mounting Brackets



Spare Tubing



Suction Strainer (with "S", "M" and "B" connections only)



Injection Fitting (with "S", "M", and "B" connections only)



Suction Tubing (with "S" connection only)



Discharge Tubing (with "S" connection only)



1.2 Storage and Handling

The pump is shipped to withstand standard shipping methods. If your pump has arrived with damaged packing, note damage and check contents immediately.

Contact factory if pump or components have sustained damage. Shipping damage is not covered under warranty and will be addressed according to Blue-White freight terms and policy.

If the pump will not be installed at time of arrival, store the pump in original packaging indoors in an air conditioned environment. Do not store pump in excessive heat or freezing temperatures, or in environments with high humidity. Do not stack other boxes or equipment on top of the pump/packaging/ box.





When preparing to install pump, keep it away from excess dust or unusual chemical/moisture exposure. Do not drop the pump or handle in such a way as to cause high impact. Always handle pump with care.

If there is any question about how to store or handle the pump and accessories, please contact the factory or authorized service center for assistance customerservice@blue-white.com (714) 893-8529.

Maximum Working Pressure (excluding pump tubes)	Up to 125 psig (8.6 bar) NOTE: see individual pump tube assembly max. pressure ratings.
Maximum Fluid Temperature (excluding pump tubes)	185 °F (85 °C) NOTE: see individual pump tube assembly max. temperature ratings.
Ambient Operating Temperature	14 °F to 115 °F (-10 °C to 46 °C)
Ambient Storage Temperature	-40 °F to 158 °F (-40 °C to 70 °C)
Maximum Viscosity	12,000 Centipoise
Maximum Suction Lift	30 ft. Water, 0 psig (9.14 m, 0 bar)
Operating Voltage	115VAC/60Hz, 1ph (2.0 Amp Maximum)
	230VAC/60Hz, 1ph (1.0 Amp Maximum)
	220VAC/50Hz, 1ph (1.0 Amp Maximum)
	240VAC/50Hz, 1ph (1.0 Amp Maximum)
	230VAC/50Hz, 1ph (1.0 Amp Maximum)
Power Cord Options	115V60Hz = NEMA 5/15 (USA)
	230V60Hz = NEMA 6/15 (USA)
	220V50Hz = CEE 7/VII (EU)
	240V50Hz = AS 3112 (Australia/New Zealand)
	230V50Hz = BS 1363/A (UK)
Motor	Brushless DC, 1/4 hp
Motor Speed Adjustment Range	2,500:1 (0.04% – 100%) Max rpm = 125 rpm
Motor Speed Adjustment Resolution	0.01% increments > 1% motor speed and < 100%
	0.04% increments < 1% motor speed
Motor Accuracy	+/- 0.5% of indicated RPM
Pump Accuracy	+/- 2% when calibrated for a specific tube at actual operating conditions
Display	5" touchscreen color LCD, UV resistant
Display Languages	English, Spanish, French, German, and Portuguese selectable
Security	Programmable 6-digit password
Maximum Overall Dimensions	8-1/4"W x 11-3/4"H x 13-1/4"D (20.9W x 29.8H x 34.5D cm)
Product Weight	25.4lb. (11.5 Kg)
Approximate Shipping Weight	30 lb. (13.6 Kg)
Enclosure	NEMA 4X (IP66), Polyester powder coated aluminum & Noryl
RoHS Compliant	Yes
Standards	cETLus, CE
BABA Compliant	Yes

2.1 OUTPUT VERSUS FLUID VISCOSITY

Fluid viscosity and motor RPM both have an effect on fluid output. For your reference the charts below display the various tubes we offer and their output at different viscosities and different motor RPM. All testing was conducted with a three foot suction lift.

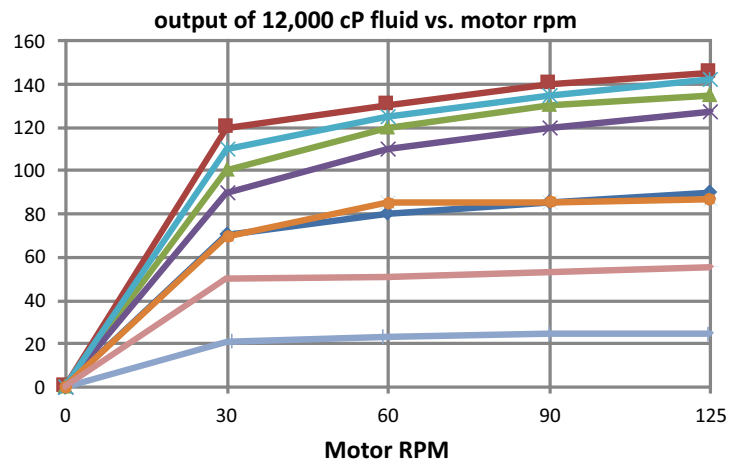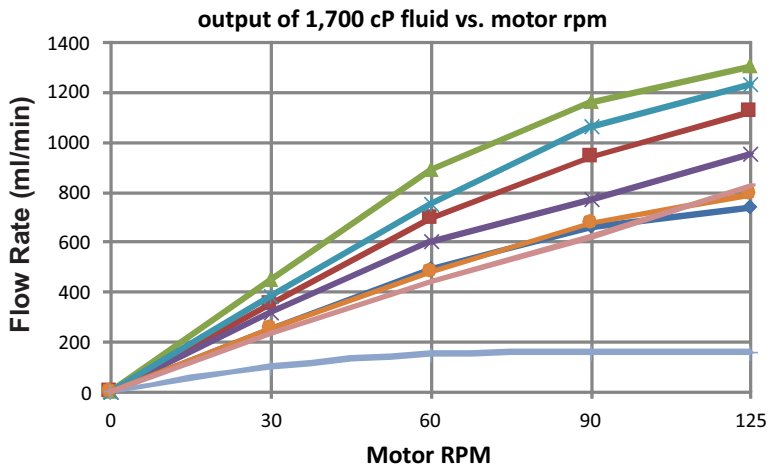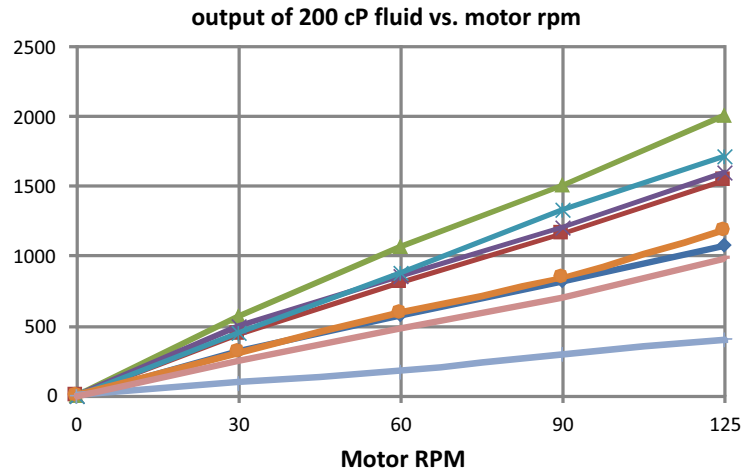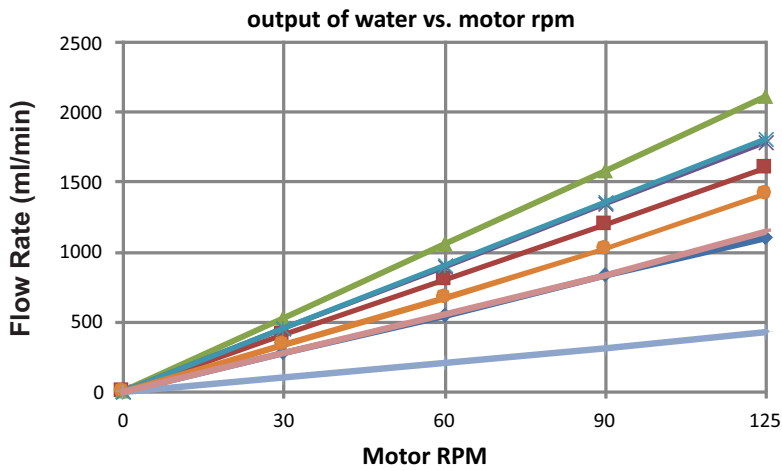

Tube Material

- ◆ MNH
- MNJ
- ▲ MNK
- ✕ MTK
- ✱ MGK
- ◆ MNGG
- ◆ MNEE

3.1 Non-Wetted Components

Non-wetted Components:

Enclosure: 413 Aluminum (Polyester powder coated) & Noryl

Pump Head: Valox® (PBT) thermoplastic

Pump Head Cover: Polycarbonate

Permanently lubricated sealed motor shaft support ball bearing.

Cover Screws: Stainless steel, polypropylene cap

Roller Assembly:

Rotor: Valox® (PBT)

Rollers: Nylon

Roller Bearings: SS Ball bearings

Motor Shaft: Chrome plated steel

TFD System Sensor: Hastelloy C-276

Power Cord: 3 conductor, SJTW-A water-resistant

Tube Installation Tool: GF nylon

Mounting Brackets and Hardware: 316 Stainless steel

3.2 Wetted Components

Wetted Components:

Pump Tube Assembly:

Tubing: Flex-A-Prene®, Flex-A-Chem or Flex-A-Thane®

Adapter Fittings: PVDF

Body & Insert: PVDF

Check Ball: Ceramic

Injection / Back-Flow Check Valve:

Spring: Hastelloy C-276

Ball Seat O-Ring: TFE/P (optional EPDM)

Static Seal O-Ring: TFE/P (optional EPDM)

Ancillary Items Provided:

Suction Tubing: 3/8" OD x 1/4" ID x 10' Clear PVC

With "S" Tubing Type Only:

Discharge Tubing: 3/8" OD x 1/4" ID x 10' Polyethylene

Suction Strainer: PVDF

With "B" Tubing and "M" M/NPT Connections Only:

(Available on ND, NKL, NGG, and NEE)

Suction Strainer: PVDF

With "C" Tri-clamp

(Available on ND, NKL, NGG, and NEE)

Suction Strainer: PVDF

** Flex-A-Prene®, Flex-A-Thane®, and Flex-A-Chem® tubing comply with FDA 21 CFR, 117.2600 criteria for food processing.

4.1 Agency Listings



This pump is ETL listed to conform to the following: UL Standard 778 as a motor operated water pump. CSA Standard C22.2 as process control equipment



This pump complies to the Machinery Directive 2006/42/EC, BS, EN 60204-1, Low Voltage Directive 2014/35/EU BS EN 61010-1, EMC Directive 2014/30/EU, BS EN 50081-1/BS EN 50082-1.

Symbol	Description
	Warning (Risk of electric shock)
	Caution (Refer to the user's guide)
	Ground, Protective Conductor Terminal

ENCLOSURE RATING

- NEMA 4X** Constructed for either indoor or outdoor use to provide a degree of protection to personnel against incidental contact with enclosed equipment; to provide a degree of protection against falling dirt, rain, sleet, snow, windblown dust, splashing water, and hose-directed water; and that will be undamaged by external formation of ice on enclosure.
- IP66** No ingress of dust; complete protection against contact. Water projected in powerful jets against enclosure from any direction shall have no harmful effects.

CAUTION

The pump should be serviced by qualified persons only. If equipment is used in a manner not specified in this manual, the protection provided by the equipment may be impaired.

CAUTION

Risk of chemical overdose. Be certain pump does not overdose chemical during backwash and periods of no flow in circulation system.

CAUTION

Always wear protective clothing, face shield, safety glasses and gloves when working on or near your metering pump. Additional precautions should be taken depending on solution being pumped. Refer to MSDS precautions from your solution supplier.

CAUTION

All diagrams are strictly for guideline purposes only. Always consult an expert before installing metering pump on specialized systems. Metering pump should be serviced by qualified persons only.

CAUTION

The pump should be supplied by an isolating transformer or RCD (operating current less or equal 30 mA).

CAUTION

When pumping chemicals that off-gas, do not leave chemicals in pump for extended periods of non-use. These chemicals can expand and damage tubes, pump, and piping. Flush thoroughly when not in use.

5.1 Mounting Location

1. Choose an area located near the chemical supply tank, chemical injection point, and electrical supply. Also, choose an area where the pump can be easily serviced.
2. Finding a secure surface and using the provided mounting hardware, mount the pump close to the injection point. Keep the inlet (suction) and outlet (discharge) tubing as short as possible. Longer discharge tubing increases back pressure at pump head.


NOTE: Mounting the pump lower than the chemical container will gravity-feed chemical into it. This “flooded suction” installation will reduce output error due to increased suction lift. A shut-off valve, pinch-clamp, or other means to halt gravity-feed to the pump must be installed during servicing.

NOTE: Install a back flow prevention check valve at the discharge side of the pump to prevent the system fluid from flowing back through pump during tube replacement or during tube rupture.


NOTE: It is recommended to have a pressure relief valve at the discharge side of the of pump to prevent premature wear and damage to the pump tube, in the event that the discharge line becomes blocked.

NOTE: The pump does not require back pressure. Keep the discharge pressure as low as possible to maximize the tube life.


5.2 Pump Dimensions

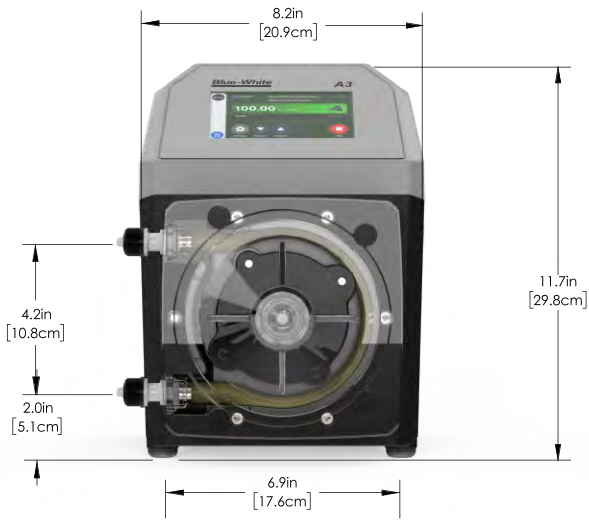

Front View

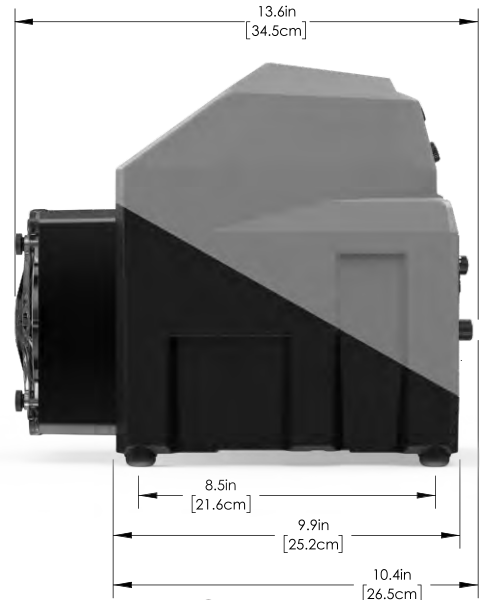

Side View

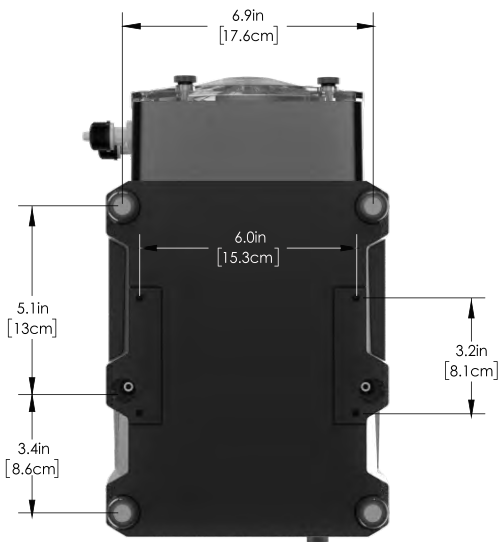

Bottom View

Mounting Hole Spacings
(for standard and extended type brackets)

Maximum bolt hole size
0.200" diameter (4 places)

Extended Brackets




Stainless Steel extended brackets allow the pump to be securely mounted to most any surface; floor, shelf, or skid. Brackets lift the pump up 4-1/2 inches (11.43 cm), for easy pump access in hard to reach areas.

- Raise metering pump 4-1/2 inches (11.43 cm) off ground or a surface.
- Made out of tough Stainless Steel.
- Provides a stable mounting surface.

Extended Brackets ordered separately. Part #72000-380




5.3 Input Power Connections

WARNING 	Risk of electric shock – cord connected models are supplied with a grounding conductor and grounding-type attachment plug. To reduce risk of electric shock, be certain that it is connected only to a properly grounded, grounding-type receptacle.
WARNING 	Electrical connections and grounding (earthing) must conform to local wiring codes.
WARNING 	Risk of electric shock - Disconnect electricity before removing the wiring compartment cover.


- Be certain to connect pump to proper supply voltage. Using incorrect voltage will damage pump and may result in injury. Voltage requirement is printed on pump serial label.
- Input power range is 96VAC to 264VAC 50/60 Hz.
- Voltage Selection is automatically detected and adjusted by power supply. No mechanical switch necessary.
- Use voltage your power cord is rated for.
- Power cord models are supplied with a ground wire conductor and a grounding type attachment plug (power cord). To reduce risk of electric shock, be certain that power cord is connected only to a properly grounded, grounding type receptacle.
- Be sure all M12 wiring cable glands are properly installed and sealed.
- Never strap control (input / output) cables and power cables together.
- **Power Interruption:** This pump has a user programmable auto-restart feature which will can either restore the pump to the operating state it was in when power was lost or require a user action to restart.

Note: When in doubt regarding your electrical installation, contact a licensed electrician.


INPUT 1	<table border="1"> <thead> <tr><th>Pin</th><th>Function</th></tr> </thead> <tbody> <tr><td>P1</td><td>Remote Start/Stop</td></tr> <tr><td>P2</td><td>FVS (+)</td></tr> <tr><td>P3</td><td>FVS (-)</td></tr> <tr><td>P4</td><td>FVS (Signal)</td></tr> <tr><td>P5</td><td>Ground</td></tr> </tbody> </table>	Pin	Function	P1	Remote Start/Stop	P2	FVS (+)	P3	FVS (-)	P4	FVS (Signal)	P5	Ground	Input 1 Connector	Input 2 Connector	Output 1 Connector	OUTPUT 1	<table border="1"> <thead> <tr><th>Pin</th><th>Function</th></tr> </thead> <tbody> <tr><td>P1</td><td>4-20mA Out (+)</td></tr> <tr><td>P2</td><td>4-20mA Out (-)</td></tr> <tr><td>P3</td><td>Contact N.O.</td></tr> <tr><td>P4</td><td>Contact N.C.</td></tr> <tr><td>P5</td><td>Ground</td></tr> </tbody> </table>	Pin	Function	P1	4-20mA Out (+)	P2	4-20mA Out (-)	P3	Contact N.O.	P4	Contact N.C.	P5	Ground
Pin	Function																													
P1	Remote Start/Stop																													
P2	FVS (+)																													
P3	FVS (-)																													
P4	FVS (Signal)																													
P5	Ground																													
Pin	Function																													
P1	4-20mA Out (+)																													
P2	4-20mA Out (-)																													
P3	Contact N.O.																													
P4	Contact N.C.																													
P5	Ground																													
INPUT 2	<table border="1"> <thead> <tr><th>Pin</th><th>Function</th></tr> </thead> <tbody> <tr><td>P1</td><td>Dry Contact</td></tr> <tr><td>P2</td><td>4-20mA In (+)</td></tr> <tr><td>P3</td><td>4-20mA In (-)</td></tr> <tr><td>P4</td><td>Pulse In (+)</td></tr> <tr><td>P5</td><td>Ground</td></tr> </tbody> </table>	Pin	Function	P1	Dry Contact	P2	4-20mA In (+)	P3	4-20mA In (-)	P4	Pulse In (+)	P5	Ground	Output 4 Connector	Output 3 Connector	Output 2 Connector	OUTPUT 2	<table border="1"> <thead> <tr><th>Pin</th><th>Function</th></tr> </thead> <tbody> <tr><td>P1</td><td>Pulse Out (+)</td></tr> <tr><td>P2</td><td>Pulse Out (-)</td></tr> <tr><td>P3</td><td>Contact N.O.</td></tr> <tr><td>P4</td><td>Contact N.C.</td></tr> <tr><td>P5</td><td>Ground</td></tr> </tbody> </table>	Pin	Function	P1	Pulse Out (+)	P2	Pulse Out (-)	P3	Contact N.O.	P4	Contact N.C.	P5	Ground
Pin	Function																													
P1	Dry Contact																													
P2	4-20mA In (+)																													
P3	4-20mA In (-)																													
P4	Pulse In (+)																													
P5	Ground																													
Pin	Function																													
P1	Pulse Out (+)																													
P2	Pulse Out (-)																													
P3	Contact N.O.																													
P4	Contact N.C.																													
P5	Ground																													
OUTPUT 4	<table border="1"> <thead> <tr><th>Pin</th><th>Function</th></tr> </thead> <tbody> <tr><td>P1</td><td>Not Used</td></tr> <tr><td>P2</td><td>Not Used</td></tr> <tr><td>P3</td><td>Relay N.O.</td></tr> <tr><td>P4</td><td>Relay N.C.</td></tr> <tr><td>P5</td><td>Ground</td></tr> </tbody> </table>	Pin	Function	P1	Not Used	P2	Not Used	P3	Relay N.O.	P4	Relay N.C.	P5	Ground				OUTPUT 3	<table border="1"> <thead> <tr><th>Pin</th><th>Function</th></tr> </thead> <tbody> <tr><td>P1</td><td>Not Used</td></tr> <tr><td>P2</td><td>Not Used</td></tr> <tr><td>P3</td><td>Contact N.O.</td></tr> <tr><td>P4</td><td>Contact N.C.</td></tr> <tr><td>P5</td><td>Ground</td></tr> </tbody> </table>	Pin	Function	P1	Not Used	P2	Not Used	P3	Contact N.O.	P4	Contact N.C.	P5	Ground
Pin	Function																													
P1	Not Used																													
P2	Not Used																													
P3	Relay N.O.																													
P4	Relay N.C.																													
P5	Ground																													
Pin	Function																													
P1	Not Used																													
P2	Not Used																													
P3	Contact N.O.																													
P4	Contact N.C.																													
P5	Ground																													



5300 Business Drive
Huntington Beach, CA 92649
(714) 893-8529 blue-white.com



5.4 Wiring Terminals and I/O Schematics

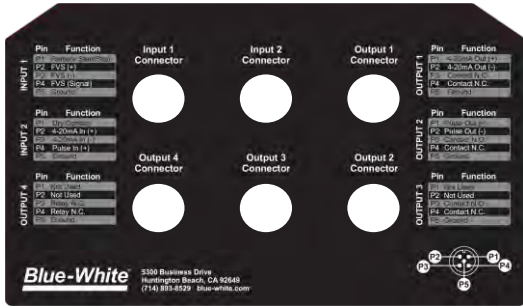

Risk of electric shock - All wiring must be insulated and rated 300V minimum.

KIT-M12 WIRING INSTRUCTIONS		
DIAGRAM	PIN #	WIRE
	PIN 1	BROWN
	PIN 2	WHITE
	PIN 3	BLUE
	PIN 4	BLACK
	PIN 5	GRAY

Shielded cables should be used on all input signal wires.

FUNCTION	M12 Connector	PIN #	RATING	BLOCK DIAGRAM	
INPUT: 4-20 mA	INPUT #2	2	(+) POSITIVE	<p>(+) ACTIVE 4-20mA TRANSMITTER SOURCE (-) SOURCE</p> <p>Min. Excitation voltage = 15V</p>	
		3	(-) NEGATIVE		
INPUT: FREQUENCY, AC SINE WAVE, TTL, CMOS	INPUT #2	4	(+) POSITIVE	<p>(-) FREQUENCY TRANSMITTER SOURCE (+)</p>	
		5	(-) NEGATIVE		
INPUT: FVS SYSTEM (FLOW VERIFICATION SENSOR) FV SENSOR ONLY	INPUT #1	2	(+) POSITIVE	<p>RED (+) BARE BLACK (-)</p> <p>BLUE-WHITE FVS SENSOR</p>	<p>WARNING: DO NOT ALLOW INPUT #1 P1 AND P2 WIRES TO TOUCH ON M12 CABLE WIRING OR THE PUMP WILL MALFUNCTION. REMOTE START/STOP IS DRY CONTACT ONLY. DO NOT APPLY VOLTAGE.</p>
		3	(-) NEGATIVE		
		4	SIGNAL		
INPUT: FVS SYSTEM (FLOW VERIFICATION SENSOR) FS or FP MICRO-FLO FLOWMETER ONLY	INPUT #1	2	(+) POSITIVE	<p>SIGNAL BLACK (-)</p> <p>BLUE-WHITE MICRO-FLO FLOWMETER PULSE OUTPUT</p>	
		3	(-) NEGATIVE		
		4	SIGNAL		
INPUT: REMOTE START/STOP DRY CONTACT C PRIMARY	INPUT #1	1	(+) POSITIVE	<p>(+) OPEN CIRCUIT IMPEDANCE MUST BE GREATER THAN (-) 50K OHM</p>	
		5	(-) NEGATIVE		
INPUT: AUTO-PRIME/ DRY CONTACT C SECONDARY	INPUT #2	1	(+) POSITIVE	<p>(+) OPEN CIRCUIT IMPEDANCE MUST BE GREATER THAN (-) 50K OHM</p>	<p>DRY CONTACT ONLY. DO NOT APPLY VOLTAGE.</p>
		5	(-) NEGATIVE		
OUTPUT: 4-20 mA	OUTPUT #1	1	(+) POSITIVE	<p>(-) 4-20mA RECEIVER 750 OHM LOAD MAX. (+)</p>	
		2	(-) NEGATIVE		
OUTPUT: FREQUENCY-OPEN COLLECTOR	OUTPUT #2	1	(+) POSITIVE	<p>(-) DIGITAL PULSE RECEIVER CIRCUIT (+)</p> <p>EXTERNAL SOURCE 1.5K OHM 6-30V DC</p>	
		2	(-) NEGATIVE		
OUTPUT: CONTACT CLOSURE #1	OUTPUT #1	3	NORMALLY OPEN	<p>NO C NC</p> <p>SWITCH LOAD 1 AMP MAX @ 125V AC 0.8 AMP MAX @ 30V DC</p>	
		4	NORMALLY CLOSED		
		5	COMMON		
OUTPUT: CONTACT CLOSURE #2	OUTPUT #2	3	NORMALLY OPEN	<p>NO C NC</p> <p>SWITCH LOAD 1 AMP MAX @ 125V AC 0.8 AMP MAX @ 30V DC</p>	
		4	NORMALLY CLOSED		
		5	COMMON		
OUTPUT: CONTACT CLOSURE #3	OUTPUT #3	3	NORMALLY OPEN	<p>NO C NC</p> <p>SWITCH LOAD 1 AMP MAX @ 125V AC 0.8 AMP MAX @ 30V DC</p>	
		4	NORMALLY CLOSED		
		5	COMMON		
OUTPUT: RELAY 6 AMP	OUTPUT #4	3	NORMALLY OPEN	<p>NO C NC</p> <p>SWITCH LOAD 6 AMP MAX @ 250V AC 5 AMP MAX @ 30V DC</p>	
		4	NORMALLY CLOSED		
		5	COMMON		

6.1 HOME SCREEN LAYOUT

Tube Info Pump Name Run Mode System Time

SCREEN COLOR
 Blue = Pump Off
 Green = Pump Running
 Yellow = Active/Waiting for remote signal
 Red = TFD, FVS or Error

Quick Setting Tab Local Only / Off Normal / Remote Only Mode Selector

Pump Status Rotation Direction

Chemical Name Water Run Time / Revolution Counter

App Drawer Settings Calibration Pump will run at 50.00% Speed Start/Stop

Run Status Settings Tube Calibration Current Pump Speed Setting FVS (Flow Verification Settings) Remote Start/Stop Settings Local-Off-Remote Settings

Quick Setting Tab - Allow users to quickly
 •Activate/Deactivate/Modify Remote Start/Stop function
 •Active/Deactivate/Modify FVS function
 •Settings for Local Only / Off "Normal" / Remote Only

6.2 APP SCREEN LAYOUT

Note:

Scroll right to see more options.

Not all App Settings are available in Local Only or Remote Only Modes. Put pump in OFF mode to access all App Settings.

Blue-White Icon Home Screen

TUBE INFO Menu 10:47 AM


Manual Speed Adjust Prime 4-20mA Input

Frequency Input Pulse Input Industrial Protocols

Page Indicator (1 of 2) Swipe right for page 2


6.3 M12 Connector

Pump (Rear Upper Panel)


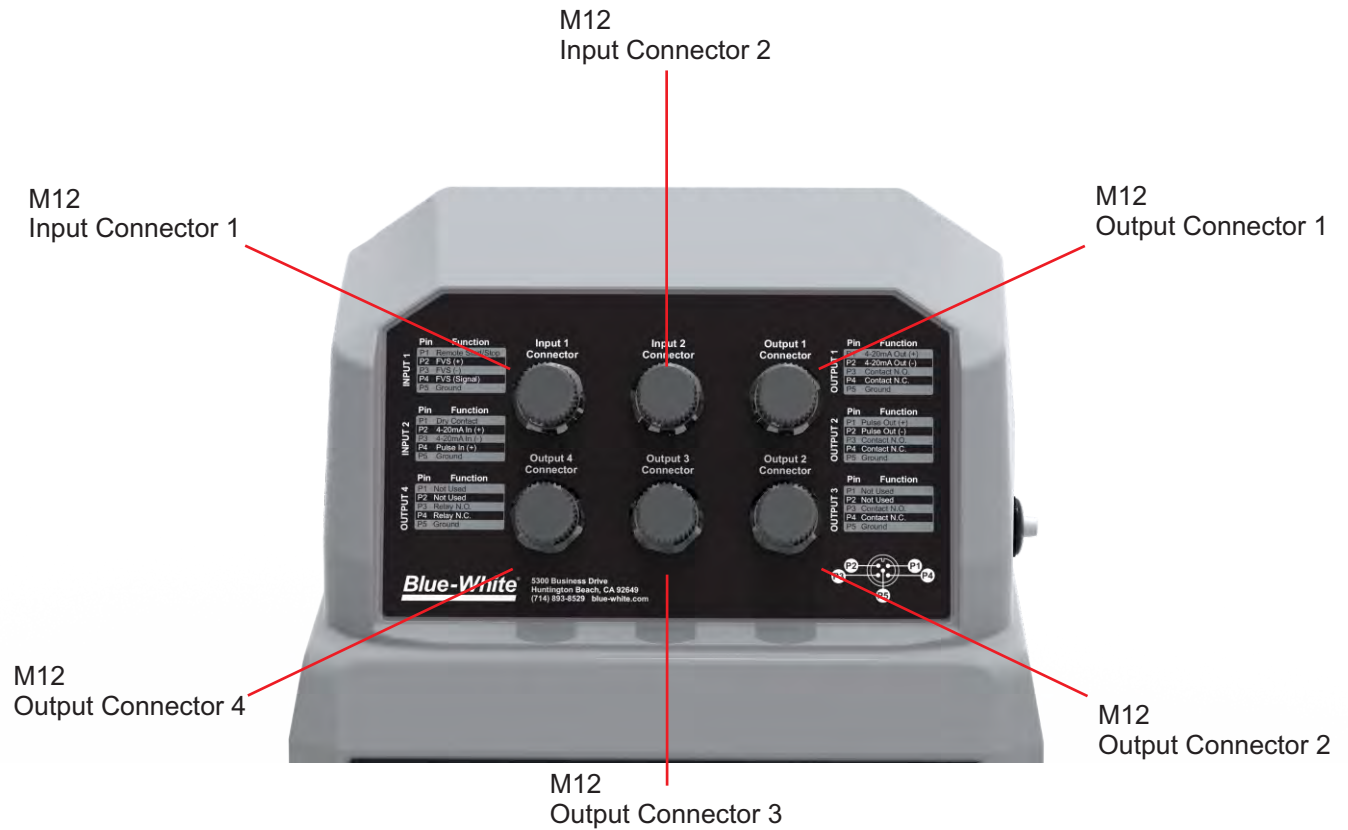


6.4 IO Connection

Pump (Rear Lower Panel)

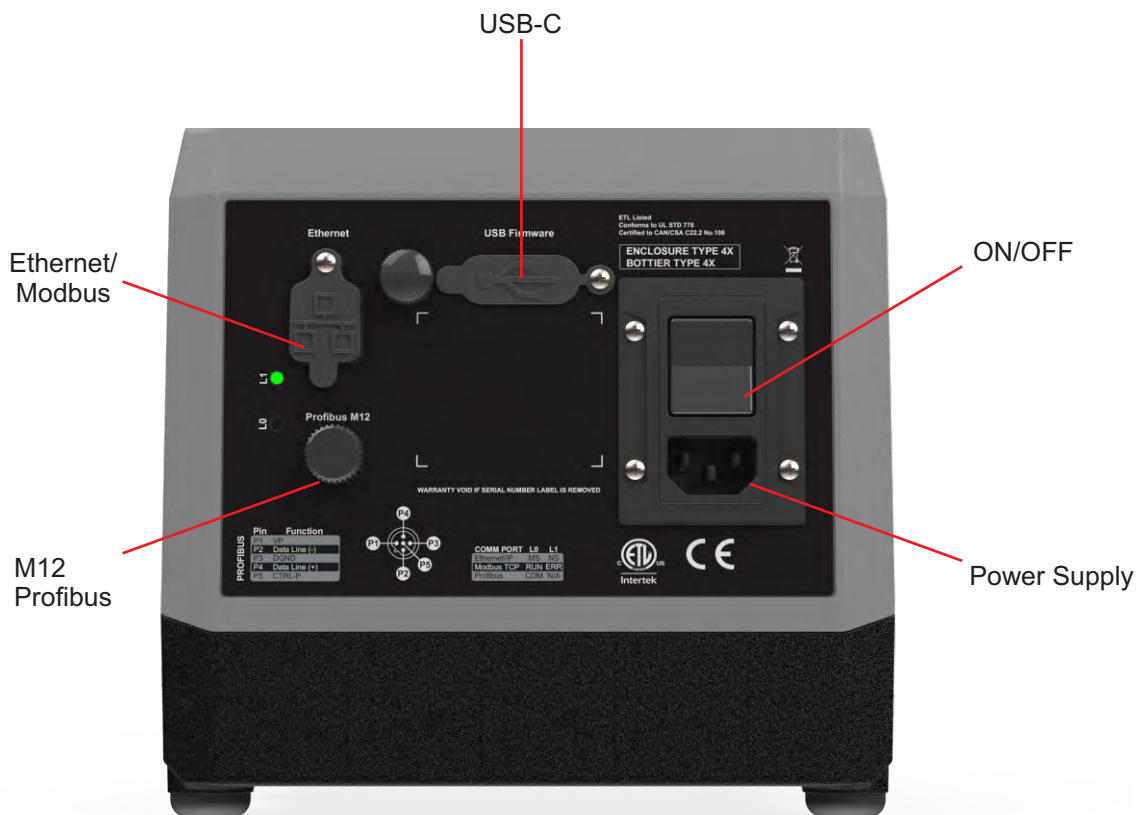

6.5 M12 Connector

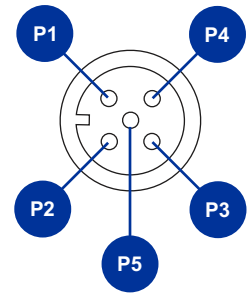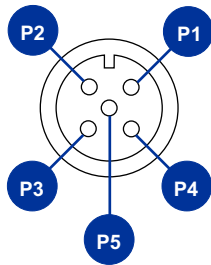

M12 Input/Output Connector

See page 13 for wiring instruction

M12 Profibus Connector

M12 Input Connector 1 ** Warning - Do not let P1 and P2 wires touch! Will damage electronics.

PIN	Function	Specifications	Reference
P1**	Remote Start/Stop	No Voltage	
P2**	FVS (+)	15 VDC @ 60 mA Supply	Power FVS Sensor
P3	FVS (-)	DC GND (0 VDC)	FVS Ground Input
P4	FVS (Signal)	Input Signal	FVS Input Signal
P5	Ground	DC Ground	0 VDC

M12 Input Connector 2

PIN	Function	Specifications	Reference
P1	Auto Prime/ Secondary Input	N.O. Dry Contact Closure	Open= Stop Gnd= Run
P2	4-20mA In (+)	120Ω Impedance Loop Ref. to Ground	Voltage = 15V to 24V
P3	4-20mA In (-)	DC GND (0 VDC)	
P4	Pulse In (+)	0-1000 Hz (AC. Square Wave) Ref. to Ground	FVS Input Signal
P5	Ground	DC GND (0 VDC)	

M12 Output Connector 1

PIN	Function	Specifications	Reference
P1	4-20mA Out (+)		750 Ohm max load
P2	4-20mA Out (-)	DC GND (0 VDC)	
P3	N.O.	Contact closure output #1 N.O. Contact 1 Amp @ 125 VAC	.8 Amp Max @ 30VDC 1 Amp @ 125 VAC
P4	N.C.	Contact closure output #1 N.C. Contact	.8 Amp Max @ 30VDC 1 Amp @ 125 VAC
P5	Common	Contact closure output #1 COM Contact	

M12 Output Connector 2

PIN	Function	Specifications	Reference
P1	Pulse Out (+)	0-1000 Hz (AC. Square Wave) Ref. to Ground	
P2	Pulse Out (-)	DC GND (0 VDC)	
P3	N.O.	Contact closure output #2 N.O. Contact	.8 Amp Max @ 30VDC 1 Amp @ 125 VAC
P4	N.C.	Contact closure output #2 N.C. Contact	.8 Amp Max @ 30VDC 1 Amp @ 125 VAC
P5	Common	Contact closure output #2 COM Contact	

M12 Output Connector 3

PIN	Function	Specifications	Reference
P1	Not Used		
P2	Not Used		
P3	N.O.	Contact closure output #3 N.O. Contact	.8 Amp Max @ 30VDC 1 Amp @ 125 VAC
P4	N.C.	Contact closure output #3 N.C. Contact	.8 Amp Max @ 30VDC 1 Amp @ 125 VAC
P5	Common	Contact closure output #3 COM Contact	

M12 Output Connector 4

PIN	Function	Specifications	Reference
P1	Not Used		
P2	Not Used		
P3	N.O.	Relay Out, N.O. Contact	6 Amp Max @ 250VAC, 5 Amp MAX @ 30VDC
P4	N.C.	Relay Out, N.C. Contact	6 Amp Max @ 250VAC, 5 Amp MAX @ 30VDC
P5	Common	Relay Out, COM Contact	

Warning! Never allow M12 cable wires to touch while the pump is active. Wiring shorts will cause the pump to malfunction and can void the warranty. Protect or tape unused wires as necessary.

**M12 Profibus Connector**

PIN	Function	Specifications	Reference
P1	VP		+5V supply for terminating resistors
P2	RxD/TxD-N		Data line minus (A-line)
P3	DGND		Data ground
P4	RxD/TxD-P		Data line plus (B-line)
P5	Shield		Ground connection

Note:

M12 cables not included with product.

Input/Output Connectors requires any A-Type M12 connector with 5 position female sockets

Profibus Connectors requires any B-Type M12 connector with 5 position female sockets

If the pump is the last bus device connected to the PROFIBUS cable it must be terminated using terminating resistor (PROFIBUS standard EN 50170).

7.1 Powering On The Pump

The A3 is equipped with a rocker switch to power ON/OFF the pump. Ensure that the power cord is securely plugged into the corresponding power source before powering on the pump.




"I" is pressed to turn on the pump

"O" is pressed to turn off the pump

7.2 Welcome Screen

The first time the pump is powered on, or after a factory reset, the pump will boot up to the Welcome Screen. Follow the onscreen instructions to configure your A3 pump. Refer to section 11 of this manual to change any of these options after you have finished the initial configuration.

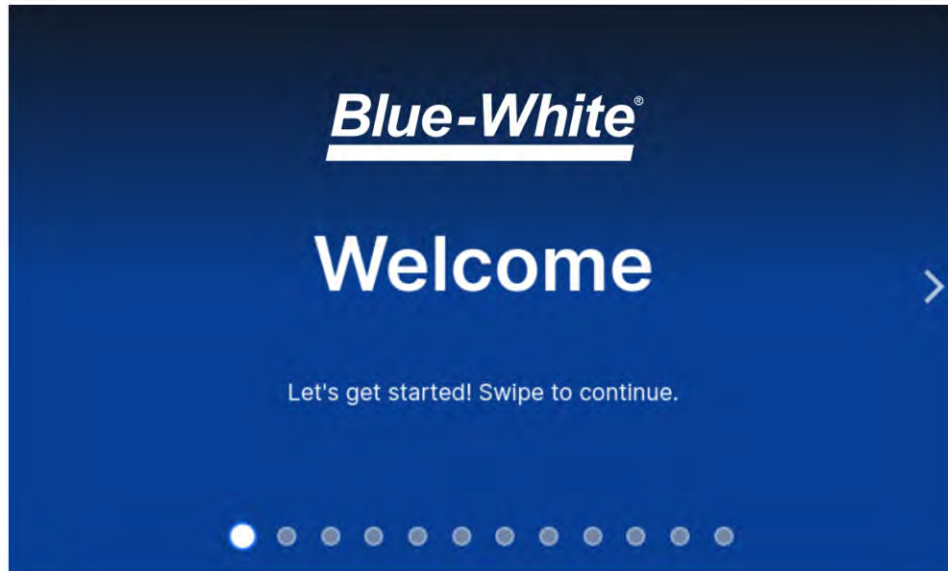

Welcome Screen Configuration

1

Local Language

2

Set Time

- Local Date
- Local Time Zone
- Local Time

3

Set Name

- Pump Name
- Chemical Name

4

Set Units

- Unit of Volume
- Unit of Time

5

Set Tube Type

6

Set User Password

8.1 Manual Speed Adjust

This input mode allows the user to set a specific speed and the pump will run at that speed until stopped. There are up and down arrows on the home screen to incrementally adjust the speed of the motor.

Default: Percent motor speed.






Also Available: RPM
Flow rate

Instructional Video



www.blue-white.com/bw-videos/how-to-enable-manual-input/

To Enable Manual Speed Adjust (While in “LOCAL ONLY” or “OFF” mode):

- 1  Open the **App Drawer**
- 2  Select **Manual Speed Adjust**
- 3  Select **Start** to enable Manual Speed
- 4  Tap on the feed rate to cycle through to the option you want to manually adjust
 - Percent motor speed
 - RPM
 - Flow rate
- 5  Adjust manual speed by selecting **Increase** or **Decrease**

Option: Stop pump and select settings to input desired motor speed.



Confirm by pressing “Save”

8.3 Frequency Input

This input mode is used to remotely control the pump with an incoming high speed frequency signal.

Four points on the slope must be defined:

- 1) a low Hz value
- 2) an output rate at the low Hz value
- 3) a high Hz value
- 4) an output rate at the high Hz value


Default settings: 0 (Hz) = 0% motor speed
 1000 (Hz) = 100% motor speed

Instructional Video




www.blue-white.com/bw-videos/how-to-enable-frequency-input/


To Enable Frequency Input (While in “REMOTE ONLY” or “OFF” Mode):

1 
 Open the **App Drawer**

2 
 Select **Frequency Input**

3 
 Select **Settings** to adjust
 Frequency Input

6
 Confirm by pressing **Save**

5 
 Select **Start** to enable
 Frequency Input

Option: Stop pump and select graph icon to easily adjust sliders to desired settings



Confirm by pressing “Save”

8.4 Pulse Input

This input mode allows the user to trigger the pump to dispense a measured amount of chemical (Amount Per Trigger) over a specific period of time (Pump On Time), after a specific number of pulses (Pulses Count Trigger). Used to remotely control the pump with an incoming pulse signal.





Default settings: Pulse Count Trigger = 1
 Pump On Time = 2.5 seconds
 Amount Per Trigger = Fluid supplied per trigger

Instructional Video



www.blue-white.com/bw-videos/how-to-enable-pulse-input/

To Enable Pulse Input (While in “REMOTE ONLY” or “OFF” Mode):

- 1**  Open the **App Drawer**
- 2**  Select **Pulse Input**
- 3**  Select **Settings** to adjust Pulse Input
 - Input value for Pulse Count Trigger
 - Input value for Amount Per Trigger
 - Input value for Pump On Time
- 4** Confirm by pressing **Save**
- 5**  Select **Start** to enable
- 6** Pump will be in **Standby Mode**

8.5 Remote Start/Stop

This input mode is used to remotely start and stop the pump using “Closed” or “Open” signal.

Primary Remote Switch (RSS1) - Used to Start/Stop the pump

Secondary Remote Switch (RSS2) - Used in conjunction with a pressure switch or level switch (M12 Input Connector 2) - Will stop pump if closed. **(Note: This option will be removed if using Auto-Prime feature.)**

Default settings: Disabled


Dry Contact Closure (0V Rating. **Do not apply voltage.**)

Instructional Video



www.blue-white.com/bw-videos/how-to-enable-the-remote-start-stop/

To Enable Remote Start/Stop (Must be in “REMOTE ONLY” or “OFF” Mode):

1 


Open the **App Drawer**

2 

Select **Settings**


3 

Select **Remote Start/Stop**

4 

Set **Remote Switch**

- Disable
- Normally Closed (Close to Stop Pump)
- Normally Open (Open to Stop Pump)

5 

Set **Secondary Remote Switch**


- Disable
- Enable Normally Closed (Close to Stop Pump)
- Option: Enable “Latching” (Enables Manual Restarting after trigger)

6

Confirm by pressing **Save**

Note: Remote Start/Stop can also be accessed via the Quick Setting Tab on the Home Screen

Note: RSS1 will appear on side bar to indicate Remote Start/Stop is active. When in Manual Only mode, RSS1 will blink indicating the feature is inactive.

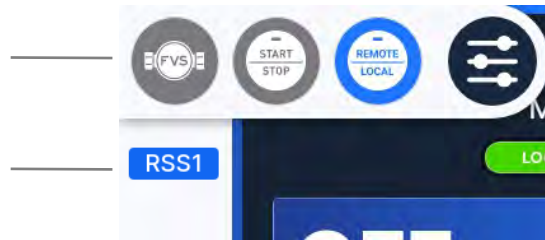

IMPORTANT: To begin operation, press the START button to place pump in STANDBY. The display background will turn yellow indicating the pump has been stopped remotely and is waiting for a signal to start. When the pump is started by the remote contact, the display background will turn green.

WARNING: If the Remote Start/Stop Input is enabled, the pump will display STANDBY if the pump has been stopped by the Remote contact signal. **Please use caution in this mode as the pump may Start at anytime. If you must perform maintenance on the pump, Press STOP button and place the in “Local Only” mode.**

8.6 Set FVS (Flow Verification System)

This input mode is used to monitor the pump fluid input. If the pump does not dispense fluid when pump head rotor is turning, the pump will go into an alarm mode and stop. FVS requires a sensor that is connected to the inlet of the pump to monitor the fluid input. Blue-White offers two flow verification sensors: [The S6A](#) & [The MICRO-FLO Flow Meter](#) that easily install into the inlet of the A3.

Default settings: Disabled


When enabled set trigger display (in seconds)

Instructional Video



www.blue-white.com/bw-videos/how-to-enable-the-flow-verification-system/

To Enable FVS:

1 
Open the **App Drawer**

2 
Select **Settings**


3 
Select **FVS**

4
Enable **FVS Input**

5
Set **Desired Trigger Delay**
(1-1000 seconds)

6
Confirm by pressing **Save**

Note: FVS Settings can also be accessed via the Quick Setting Tab on the Home Screen

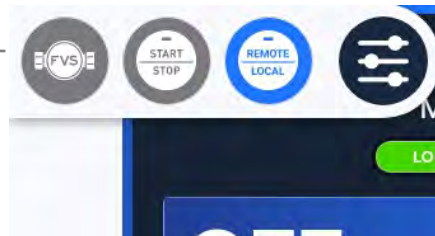

8.7 Prime

This mode allows the user to prime the pump at 100% motor speed for sixty seconds. After the prime is complete the pump will remain in this mode ready to be primed again.


To exit: select another input method.

Instructional Video



www.blue-white.com/bw-videos/how-to-prime-the-pump/

To Prime The Pump (While in “LOCAL ONLY” or “OFF” mode):

1  Open the **App Drawer**

2  Select **Prime**

3  Select **Start** to Prime the pump

4 Pump will run at 100% motor speed for sixty seconds

5 Pump will remain in **Prime Input**

8.8 Auto-Prime

This mode will allow the user to prime the pump remotely using the secondary dry contact input. Both prime duration and percent motor speed is configurable. (This feature uses the P1 contact on Input #2 connector. Note: Can not be used if using Secondary Contact Input)


Default settings: 60 Seconds at 100% Motor Speed

Instructional Video



www.blue-white.com/bw-videos/how-to-enable-auto-prime/

To Enable Auto-Prime (While in “REMOTE ONLY” or “OFF” mode):

1 
Open the **App Drawer**

2 
Select **Settings**

3 
Select **Auto-Prime**

4
Enable **Auto-Prime**

5
Input Values
•Prime duration (in seconds)
•Percent Motor Speed

6
Select **Save** to save the settings

IMPORTANT: This feature will be disabled when in “Local Only Mode”.

IMPORTANT: **Please use caution when using this feature as the pump may Start or change speeds at anytime.**

8.9 Manual Cycle Adjust

This input mode allows the user to run the pump at a set motor speed (Pump Speed) for a set amount of time (Duty Time) after which the pump will pause for a set amount of time (Cycle Time). This cycle will repeat until the user presses the STOP button.

Default settings:

Pump Speed = 100% Motor Speed

Duty Time = 1.5 Seconds


Cycle Time = 4.0 Seconds

Instructional Video




www.blue-white.com/bw-videos/how-to-enable-manual-cycle-adjust/

To Enable Manual Cycle Adjust (While in “LOCAL ONLY” or “OFF” mode):

1 
Open the **App Drawer**

2 
Select **Manual Cycle Adjustment**

3 
Select **Settings** to configure Manual Cycle Adjustment settings

4
Set **Pump Speed**
(0.04 - 100 percent)

5
Set **Duty Time**
(1 - 1,000,000 seconds)

6
Set **Cycle Time**
(1 - 1,000,000 seconds)

7
Confirm by pressing **Save**

8.10 Dispensing

This input mode allows the user to dispense a set amount of fluid (in milliliters) at a set rate (Motor % Speed).




Default settings: Amount Per Dispense = 1,000 mL
 Motor % Speed = 50%


Instructional Video



www.blue-white.com/bw-videos/how-to-enable-the-flow-verification-system/

To Enable Dispensing (While in “LOCAL ONLY” or “OFF” mode):

- 1  Open the **App Drawer**
- 2  Select **Dispensing**
- 3  Select **Settings** to configure Dispensing settings
- 4 Select Profile to Program (4 Profiles)
- 5 Set **Amount Per Dispense** (in milliliters)
Set **Motor % Speed** (0.04 -100)
- 6 Dispense Run Time will be displayed.
Confirm by pressing **Save**

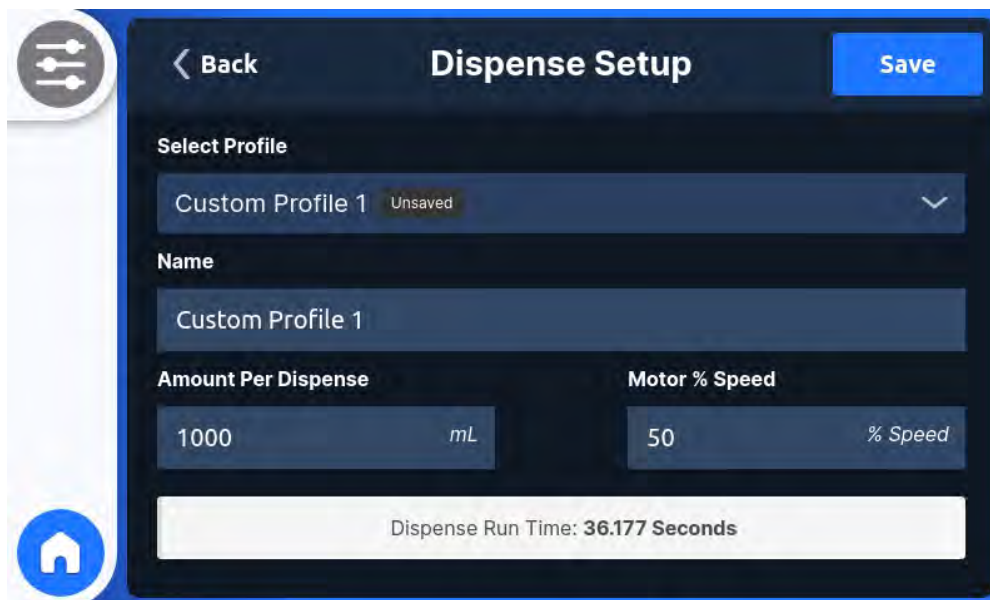

Note: If your Dispense run time is shorter than 1 second the pump will generate a “Run Time Too Short!” ERROR. Please reconfigure dispensing settings to be greater than 1 second

8.11 Time of Day

This mode allows the user to run the pump at a specific motor speed for a specific length of time beginning at a specific time of day.

Three values to be defined:

- 1) Percent Motor Speed
- 2) Run time (in minutes)
- 3) Time of Day that the pump will turn on

Instructional Video



www.blue-white.com/bw-videos/how-to-enable-the-time-of-day-input/

To Enable Time of Day:



Open the **App Drawer**



Select **Time of Day**



Select **Settings** to configure

4

Input Values

- Motor Speed (percentage)
- Run Time (in minutes)
- Time of Day

5

Select **Save** to save the settings

Verify the time on the pump is in synch with your local time zone

8.12 Revolution Alarm

This mode will allow the user to set an alert once a set number of revolutions has been reached. One of the primary factors effecting tube life is the number of revolutions the tube has operated. A revolution alarm set point can be inputted which will alert the user when the tube should be serviced. When the set point is reached, the pump will display “Revolution Count Exceeded” however **THE PUMP WILL NOT STOP**


Default settings: Amount will vary depending on tube that is installed

Instructional Video



www.blue-white.com/bw-videos/how-to-enable-the-revolution-alarm/

To Enable Revolution Alarm:

1 
Open the **App Drawer**

2 
Select **Settings**

3 
Select **Revolution Alarm**

4
Enable **Revolution Alarm**

5
Input Values
•Amount of Revolutions

6
Select **Save** to save the settings

8.13 Passcode

This setting is used to enable/disable the passcode, adjust the passcode time out and set or change the User Passcode.

Default settings: Pump will lockout after 30 seconds

Instructional Video



www.blue-white.com/bw-videos/how-to-enable-the-passcode/

To Input a Passcode:



Open the **App Drawer**



Open **Settings**



Open **Passcode**



Enable Passcode



Select **User Passcode** and create new a six digit code.



Confirm by pressing **Save**

Lost password? Email customerservice@blue-white.com to have your password reset


8.14 Local Only Mode


This mode will allow the user to put the pump into a state where all remote input signals are disabled. The pump may only be operated and run manually (Manual Speed Adjust) at the pump.

Features disabled are : Remote Start/Stop, 4-20ma Input, Frequency Input, Pulse Input, Auto Prime, Communications (Ethernet IP, Modbus TCP, Profibus) inputs.

To Enable Local Only Mode:

1
Stop the Pump

2 
Press "LOCAL" Key


3 
Press "OK" to confirm
Local Mode is Enabled

To Disable Local Only Mode:

1
Stop the Pump

2 
Press "OFF" or "REMOTE"
Key

3 Local Mode is Disabled
and pump will be returned to
normal operation

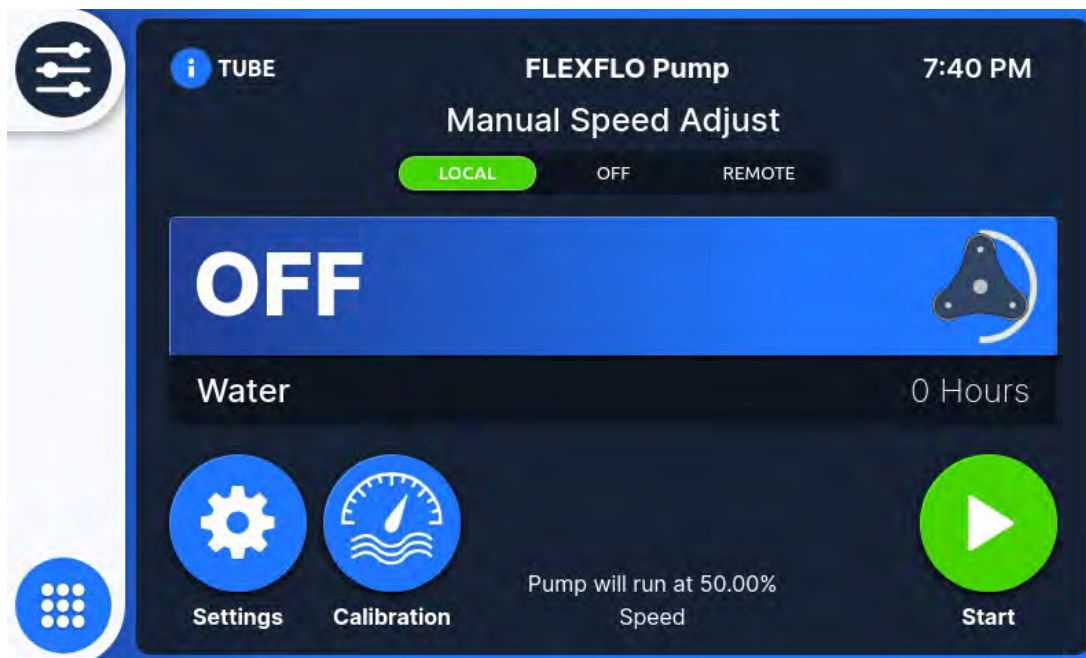

9.1 Set 4-20mA Output


This output sends a configurable 4-20mA. This feature can be used to control other pumps (in sync / proportionally), data logging systems, and other external devices for plant automation.

Four points on the slope must be defined:

- 1) a low mA value
- 2) an output rate at the low mA value
- 3) a high mA value
- 4) an output rate at the high mA value

Default settings: 4mA = 0 percent motor speed
 20mA = 100 percent motor speed

To Enable 4-20mA Output:

1 
Open the **App Drawer**

2 
Select **Outputs**

3 
Select **4-20mA Output**

4
Enable **4-20mA Output**

5
Set desired values for the four points that is required.

6
Confirm by pressing **Save**

Option: Stop the pump and select the graph icon to easily adjust sliders to desired settings

Confirm by pressing "Save"



9.2 Frequency Output


This output sends a configurable high speed frequency signal. This feature can be used to control other pumps (in sync / proportionally), data logging systems, and other external devices for plant automation.

Four points on the slope must be defined:

- 1) a low Hz value
- 2) an output rate at the low Hz value
- 3) a high Hz value
- 4) an output rate at the high Hz value

Default settings: 0 Frequency (Hz) = 0 percent motor speed
 1000 Frequency (Hz) = 100 percent motor speed

To Enable Frequency Output:

1 
Open the **App Drawer**

2 
Select **Outputs**

3 
Select **Frequency Output**

4
Enable **Frequency Output**

5
Set **Desired Values**

6
Confirm by pressing **Save**

Option: Stop the pump and select the graph icon to easily adjust sliders to desired settings

Confirm by pressing “Save” 


9.3 Relay & Contacts

This feature is used to assign alarms to relay & contact closures

Four values to be defined:

- 1) Contact #1
- 2) Contact #2
- 3) Contact #3
- 4) Relay Output

To Enable Relay & Contacts:

1 
Open the **App Drawer**

2 
Select **Outputs**

3 
Select **Relay & Contacts**

4
Set **Desired Values**
(refer to chart below)

- Contact #1
- Contact #2
- Contact #3
- Relay Output

5
Confirm by pressing **Save**

Selection:	Contact energizes when:
Pump Run/Stop	Motor turning (roller assembly is rotating)
Monitor Input	Incoming analog or digital signal is not received or out of range
Monitor Output	Outgoing analog or digital signal not transmitted or out of range
Monitor Run/Fail	Motor fails to respond to commands
4-20 In Active	4-20mA mode is running
Frequency In Active	Frequency mode is running
Manual Speed Active	Manual Speed mode is running
Manual Cycle Active	Manual Cycle Adjust is running
Dispense Active	Dispensing Mode is running
Pulse In Active	Pulse In mode is running
Prime Active	Prime mode is running
Pump Available	Pump is powered On.
Local Active	When in "LOCAL ONLY" Mode
Remote Active	When in "REMOTE ONLY" Mode
FVS	After the programmed delay time pulses are not received from flow sensor.
TFD	Tube failure is detected by sensors in the head
Both TFD/FVS	Either TFD or FVS system triggers
General Error	Motor Overload or other internal error

10.1 Control and Status Mapping

Version 4 : February 20, 2024

Terminology: TFD/DFD = Tube/Diaphragm Failure Detection

FVS = Flow Verification System

LSB = Least Significant Byte

MSB = Most Significant Byte

Ethernet/IP and Profibus: Output Data (PLC to Pump) - Pump Control

DATA TYPE - BYTE (UINT8)		
Offset	Name	Description
0 - 1	Motor Percent Speed	Motor percent speed (up to 2 decimal places), with most significant Offset representing the whole number and least significant Offset representing the decimal number. (Eg. 50.15% => MSB = 50, LSB = 15)
2	Motor Direction	0 = Clockwise, 1 = Counter-clockwise.
3	Run State	Set the current run state of the pump by toggling the corresponding bits, where 0 = deactivated and 1 = activated. Bit 0 = Prime, Bit 1 = Start, Bit 2 = Stop
4	Reset Alarms	Reset alarms (TFD/DFD, FVS) on the pump. 0 = nothing, 1 = reset alarms. Only reset on a 0 -> 1 transition
5	Reset Tube Stats	Reset tube revolutions counter and hours ran
6	Cyclic Counter Direction	Cyclic counter direction (debugging purpose only). 0 = count up, 1 = count down
7	Cyclic Counter Speed	Cyclic counter speed (debugging purpose only). 0 = counter not incremented/decremented. Values > 0 = number of cycles it takes to increment/decrement the counter by one

DATA TYPE - WORD (UINT16)		
Offset	Name	Description
0	Motor Percent Speed	Motor percent speed (up to 2 decimal places), represented as a whole number (Eg. 50.15% => 5015)
1	Motor Direction	0 = Clockwise, 1 = Counter-clockwise.
2	Run State	Set the current run state of the pump by toggling the corresponding bits, where 0 = deactivated and 1 = activated. Bit 0 = Prime, Bit 1 = Start, Bit 2 = Stop
3	Reset Alarms	Reset alarms (TFD/DFD, FVS) on the pump. 0 = nothing, 1 = reset alarms. Only reset on a 0 -> 1 transition
4	Reset Tube Stats	Reset tube revolutions counter and hours ran
5	Cyclic Counter Direction	Cyclic counter direction (debugging purpose only). 0 = count up, 1 = count down
6	Cyclic Counter Speed	Cyclic counter speed (debugging purpose only). 0 = counter not incremented/decremented. Values > 0 = number of cycles it takes to increment/decrement the counter by one

10.2 Control and Status Mapping Ethernet IP and Profibus DP

Ethernet/IP and Profibus: Input Data (Pump to PLC) - Pump Status

DATA TYPE - BYTE (UINT8)		
Offset	Name	Description
0	Run Status	Current run state of the pump represented by each bit, where 0 = Deactivated and 1 = Activated. Bit 0 = Prime, Bit 1 = Control Active, Bit 2 = Motor Running
1	Cover Status	0 = Cover Attached, 1 = Cover Detached
2	Motor Direction	0 = Clockwise, 1 = Counter-clockwise
3	TFD/DFD status	0 = No TFD/DFD alarm, 1 = TFD/DFD alarm
4	FVS status	0 = No FVS alarm, 1 = FVS alarm
5	Relay Output	Relay output statuses represented by each bit, where 0 = not triggered, and 1 = triggered. Bit 0 = Dry Contact 1, Bit 1 = Dry Contact 2, Bit 3 = Dry Contact 3, Bit 4 = Standard Relay
6 - 7	4-20 mA Output	Range: 400 - 2000 mA, where MSB represents the whole number and LSB represents the decimal number. Eg. 4.50 mA => Offset 6 = 4, Offset 7 = 50
8 - 9	Frequency Output	Range: 0 - 1000 Hz, where the MSB represent thousands and hundreds digits and LSB represents the tens and ones digits. Eg. 985 Hz => Offset 8 = 85, Offset 9 = 09
10 - 11	Motor Percent Speed	Motor percent speed (up to 2 decimal places), with most significant Offset representing the whole number and least significant Offset representing the decimal number. (Eg. 50.15% => MSB = 50, LSB = 15)
12 - 15	Firmware Version	Firmware version in semantic versioning format. Channel can be one of three values: 0 = stable, a(0x61) = alpha, b(0x62) = beta. Example: (1.0.5-beta => Offset 15: 1, Offset 14: 0, Offset 13: 5, Offset 12: b(0x62))
16 - 19	Tube Revolutions	Current tube revolution counter
20 - 23	Tube Hours	Number of hours ran for current tube
24 - 25	Cyclic Counter	Cyclic counter (debugging purpose only)

10.1 Control and Status Mapping Ethernet IP and Profibus DP

DATA TYPE – WORD (UINT16)		
Offset	Name	Description
0	Run Status	Current run state of the pump represented by each bit, where 0 = Deactivated and 1 = Activated. Bit 0 = Prime, Bit 1 = Control Active, Bit 2 = Motor Running
1	Cover Status	0 = Cover Attached, 1 = Cover Detached
2	Motor Direction	0 = Clockwise, 1 = Counter-clockwise
3	TFD/DFD status	0 = No TFD/DFD alarm, 1 = TFD/DFD alarm
4	FVS status	0 = No FVS alarm, 1 = FVS alarm
5	Relay Output	Relay output statuses represented by each bit, where 0 = not triggered, and 1 = triggered. Bit 0 = Dry Contact 1, Bit 1 = Dry Contact 2, Bit 3 = Dry Contact 3, Bit 4 = Standard Relay
6	4-20 mA Output	4-20mA Output value, represented as whole number. Range: 400 - 2000 mA (Eg. 12.5mA => 1200)
7	Frequency Output	Frequency output value. Range: 0 - 1000 Hz
8	Motor Percent Speed	Motor percent speed (up to 2 decimal places), represented as a whole number (Eg. 50.15% => 5015)
9 - 10	Firmware Version	Firmware version in semantic versioning format. Channel can be one of three values: 0 = stable, a(0x61) = alpha, b(0x62) = beta. Example: 1.0.5-beta => Offset 10 (MSB): 1, Offset 10 (LSB): 0, Offset 9 (MSB): 5, Offset 9 (LSB): b(0x62)
11 - 12	Tube Revolutions	Current tube revolution counter
13 - 14	Tube Hours	Number of hours ran for current tube
15	Cyclic Counter	Cyclic counter (debugging purpose only)

10.2 Control and Status Mapping Modbus TCP

Modbus TCP: Holding Registers (4x Reference, PLC to Pump, 16-bit word) - Pump Control

DATA TYPE – BYTE (UINT8)		
Register	Name	Description
0000	Motor Percent Speed	Motor percent speed (up to 2 decimal places), with MSB representing the whole number and LSB representing the decimal number. (Eg. 50.15% => MSB = 50, LSB = 15)
0001	Motor Direction and Run State	LSB is the motor direction where 0x00 = Clockwise, 0x01 = Counter-clockwise. MSB is to set the current run state of the pump by toggling the corresponding bits, where 0 = deactivated and 1 = activated. Bit 0 = Prime, Bit 1 = Start, Bit 2 = Stop
0002	Reset Alarms and Tube Stats	LSB is to reset alarms (TFD/DFD, FVS) on the pump, where 0x00 = nothing, 0x01 = reset alarms. Only reset on a 0 -> 1 transition. MSB is to reset tube revolutions counter and hours ran
0003	Cyclic Counter Direction and Speed	LSB is to set cyclic counter direction, where 0 = count up and 1 = count down. MSB is to set the cyclic counter speed, where 0 = counter not incremented/decremented. Values > 0 = number of cycles it takes to increment/decrement the counter by one. These are meant for debugging purposes only

DATA TYPE – WORD (UINT16)		
Register	Name	Description
0000	Motor Percent Speed	Motor percent speed (up to 2 decimal places) represented as a whole number. (eg. 50.15% => 5015)
0001	Motor Direction	Motor direction where 0x00 = Clockwise, 0x01 = Counter-clockwise
0002	Run State	Set the current run state of the pump by toggling the corresponding bits, where 0 = deactivated and 1 = activated. Bit 0 = Prime, Bit 1 = Start, Bit 2 = Stop
0003	Reset Alarms	Reset alarms (TFD/DFD, FVS) on the pump, where 0x00 = nothing, 0x01 = reset alarms. Only reset on a 0 -> 1 transition
0004	Tube Stats	Reset tube revolutions counter and hours ran
0005	Cyclic Counter Direction	Set cyclic counter direction, where 0 = count up and 1 = count down. These are meant for debugging purposes only
0006	Cyclic Counter Speed	Set the cyclic counter speed, where 0 = counter not incremented/decremented. Values > 0 = number of cycles it takes to increment/decrement the counter by one. These are meant for debugging purposes only

10.2 Control and Status Mapping Modbus TCP

Modbus TCP: Input Registers (3x Reference, Pump to PLC, 16-bit word) - Pump Status

DATA TYPE - BYTE (UINT8)		
Register	Name	Description
0000	Run Status and Cover Status	LSB is the current run state of the pump, represented by each bit, where 0 = Deactivated and 1 = Activated. Bit 0 = Prime, Bit 1 = Control Active, Bit 2 = Motor Running. MSB is the cover status, where 0 = Cover Attached, 1 = Cover Detached
0001	Motor Direction and TFD/DFD status	LSB is the motor direction where 0 = Clockwise, 1 = Counter-clockwise. MSB is the TFD/DFD status where 0 = No TFD/DFD alarm, 1 = TFD/DFD alarm
0002	FVS status and Relay Output	LSB is the FVS status where 0 = No FVS alarm, 1 = FVS alarm. MSB is the relay output statuses represented by each bit, where 0 = not triggered, and 1 = triggered. Bit 0 = Dry Contact 1, Bit 1 = Dry Contact 2, Bit 3 = Dry Contact 3, Bit 4 = Standard Relay
0003	4-20 mA Output	Range: 400 - 2000 mA, where MSB represents the whole number and LSB represents the decimal number. Eg. 4.50 mA => MSB = 4, LSB = 50
0004	Frequency Output	Range: 0 - 1000 Hz, where the MSB represent thousands and hundreds digits and LSB represents the tens and ones digits. Eg. 985 Hz => Byte 8 = 85, Byte 9 = 09
0005	Motor Percent Speed	Motor percent speed (up to 2 decimal places), with MSB representing the whole number and LSB representing the decimal number. (Eg. 50.15% => MSB = 50, LSB = 15)
0006	Firmware Patch and Build	Firmware patch number and build channel. LSB is the firmware build channel. Channel can be one of three values: 0 = stable, a(0x61) = alpha, b(0x62) = beta. MSB is the firmware patch number Example: (1.0.5-beta => MSB is 5, LSB = b(0x62))
0007	Firmware Major and Minor Version	Firmware major and minor version. MSB is the major version and LSB is the minor version Example: (1.0.5-beta => MSB = 1 and LSB = 0)
0008 - 0009	Tube Revolutions	Current tube revolution counter
0010 - 0011	Tube Hours	Number of hours ran for current tube
0012	Cyclic Counter	Cyclic counter (debugging purpose only)

10.2 Control and Status Mapping for Modbus TCP

DATA TYPE - WORD (UINT16)		
Register	Name	Description
0000	Run Status	Run state of the pump, represented by each bit, where 0 = Deactivated and 1 = Activated. Bit 0 = Prime, Bit 1 = Control Active, Bit 2 = Motor Running
0001	Cover Status	Cover status, where 0 = Cover Attached, 1 = Cover Detached
0002	Motor Direction	Motor direction where 0 = Clockwise, 1 = Counter-clockwise
0003	TFD/DFD status	TFD/DFD status where 0 = No TFD/DFD alarm, 1 = TFD/DFD alarm
0004	FVS status	FVS status where 0 = No FVS alarm, 1 = FVS alarm
0005	Relay Output	Relay output statuses represented by each bit, where 0 = not triggered, and 1 = triggered. Bit 0 = Dry Contact 1, Bit 1 = Dry Contact 2, Bit 3 = Dry Contact 3, Bit 4 = Standard Relay
0006	4-20 mA Output	4-20mA Output value, represented as whole number. Range: 400 - 2000 mA
0007	Frequency Output	Frequency Output value. Range: 0 - 1000 Hz
0008	Motor Percent Speed	Motor percent speed (up to 2 decimal places) represented as a whole number. (Eg. 50.15% => 5015)
0009	Firmware Patch and Build	Firmware patch number and build channel. LSB is the firmware build channel. Channel can be one of three values: 0 = stable, a(0x61) = alpha, b(0x62) = beta. MSB is the firmware patch number Example: 1.0.5-beta => MSB is 5, LSB = b(0x62)
0010	Firmware Major and Minor Version	Firmware major and minor version. MSB is the major version and LSB is the minor version Example: (1.0.5-beta => MSB = 1 and LSB = 0)
0011 - 0012	Tube Revolutions	Current tube revolution counter
0012 - 0013	Tube Hours	Number of hours ran for current tube
0014	Cyclic Counter	Cyclic counter (debugging purpose only)


10.3 EtherNet/IP

This is used to configure the EtherNet/IP

Three values to be defined:

- 1) IP Address
 - 2) Subnet Mask
 - 3) Gateway
 - 4) Always on
-


To Enable EtherNet/IP:

1 
Open the **App Drawer**

2 
Select **Industrial Protocols**

3 
Select **EtherNet/IP**

4
Pump will go to home screen

5 
Select **Settings** to input:

- IP Address
- Subnet Mask
- Gateway
- Always on

6
Confirm by pressing **Save**


10.4 Modbus TCP/IP

This is used to configure the Modbus TCP/IP

Three values to be defined:

- 1) IP Address
 - 2) Subnet Mask
 - 3) Gateway
 - 4) Always on
-


To Enable Modbus TCP:

1 
Open the **App Drawer**

2 
Select **Industrial Protocols**

3 
Select **Modbus TCP/IP**

4
Pump will go to home screen

5 
Select **Settings** to input:

- IP Address
- Subnet Mask
- Gateway
- Always on

6
Confirm by pressing **Save**

10.5 Profibus DPV2

This is used to configure the Profibus

Three values to be defined:

- 1) Bus Address
- 2) Baud Rate
- 3) Watchdog Time
- 4) Always on


To Enable Profibus:

1 
Open the **App Drawer**

2 
Select **Industrial Protocols**

3 
Select **Profibus**

4
Pump will go to home screen

5 
Select **Settings** to input:

- Bus Address
- Baud Rate
- Watchdog Time
- Always on

6
Confirm by pressing **Save**

11.1 Tube Info

This feature will display information regarding the tubing within the pump including:

- Tube type
 - Tube installation date
 - Tube run time
 - Current maximum tube flow rate
-

To View The Tube Info:

1


Tap on the **Tube Info** text in the top portion of the screen

2

Tube info will be displayed

3

Click “reset” to reset the tube hours and revolutions

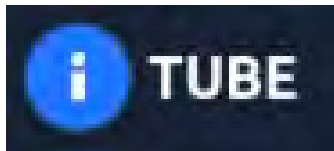

11.2 Tube Calibration

This feature allows the user to calibrate the pump's indicated flow rate to the system

To Calibrate Your Tube:

1

On the home screen select the **Calibration Icon**



2

Enter values:

- Pump Speed (% Speed)
- Run Time (seconds)

3

Select **Start** to begin

4

Select **Start**

5

Enter the measured flow rate into the field


6

Confirm by selecting **Save**

12.1 Pump Name

This is to change the name of the pump that is displayed on the home screen.

To Input Pump Name:

1 
Open the **App Drawer**

2 
Open **Settings**

3 
Open **System**

4
Select "**Pump Name**"


5
Enter desired **Pump Name**

6
Confirm by pressing **OK**

12.2 Unit of Volume

This is to change the units of volume that is displayed.

To Input Units of Volume:

1 
Open the **App Drawer**

2 
Open **Settings**

3 
Open **System**

4
Select **Unit of Volume**

5 Select desired **Units of Volume**


- Milliliters
- Ounces
- Liters
- Gallons

6 Confirm by pressing **OK**

12.3 Unit of Time

This will change the Unit of Time that is displayed for the flow rate

To Input Unit of Time:

1 
Open the **App Drawer**

2 
Open **Settings**

3 
Open **System**

4
Select **Unit of Time**

5
Select **Desired Time**


- Minutes (mL & ounces only)
- Hours
- Days (Gallons only)

6
Confirm by pressing **OK**

12.4 Chemical Name

This is used to change the Chemical Name that is displayed on the home screen.

To Input a Chemical Name:

1 
Open the **App Drawer**

2 
Open **Settings**

3 
Open **System**

4
Select "**Chemical Name**"


5
Enter desired **Chemical Name**

6
Confirm by pressing **OK**

12.5 Max Motor RPM Cut-off

This will limit the maximum speed (RPM) that the pump can run, regardless of run mode.

To Input the Max Motor RPM:

1 
Open the **App Drawer**

2 
Open **Settings**

3 
Open **System**

4
Select Max Motor RPM Cut-off


5
Select **Desired RPM**

6
Confirm by pressing **OK**


12.6 Set Language

This setting is used to change the system language.

To Input a Language:

1 
Open the **App Drawer**

2 
Open **Settings**

3 
Open **System**

4
Select **Locale**

5
Select **Desired Language**

- English
- Deutch
- Español
- Français
- Portugues


6
Confirm by pressing **OK**

12.7 Pump Rotation Direction

This setting is used to change the rotational direction of pump. In most applications, the tube will fail by developing a small leak in the outlet side (pressure side) of the tube assembly. By reversing the roller rotation, the wear point in the tube is moved to the opposite side to the pump tube assembly, increasing the life of the tube.

Important! Changing the rotational direction of the pump reverses the inlet & outlet sides.

To Change The Direction Of The Pump Rotation

1 
Open the **App Drawer**

2 
Open **Settings**

3 
Open **System**

4
Select **Pump Direction**

5
Select **Desired Rotation**

6
Confirm by pressing **OK**

*Clockwise

*Counter Clockwise

Disconnect power from the pump. Carefully purge any pressure in the discharge line of the pump. Disconnect the suction end tubing/piping and the discharge end tubing/piping from the pump head tubing.

IMPORTANT! Swap sides of the suction (inlet) and discharge (outlet) tubing/piping. There is no need to remove the pump head cover.

NOTE: The pump tube will form a natural U-shaped curve. Do not attempt to install the pump tube against the natural U-shape direction as damage to the tube can result.

WARNING: If using **Industrial Protocols (Modbus TCP, Ethernet IP, Profibus)** to control the direction of rotation, the rotation direction may be different when switching to “LOCAL ONLY” or “OFF” Mode.



12.8 Resume Operation on Start-Up


This setting is used to choose whether to resume operation in the same state prior to turning off pump, or after power interruption.

Note: Pump will require approx. 30 seconds for initialization before resuming operation.


Default settings: Enabled

Disabled = Pump will be stopped at Start-Up

To Modify Setting:

1 
Open the **App Drawer**

2 
Open **Settings**

3 
Open **System**

4
Scroll down to **Resume Operation**


5
Select **Enable /Disable**

6
Confirm by pressing **Save**

12.9 Factory Reset

This setting is used to factory reset the pump. This will erase all of the configurations and restore the pump to it's original configuration when it left Blue-White factory.

To Conduct A Factory Reset:

1 
Open the **App Drawer**

2 
Open **Settings**

3 
Open **System**

4
Select **Reset to Factory Defaults**

5
Confirm by pressing **Continue**

6
Pump will **Reboot** and run through the initial setup process

Lost password? Email customerservice@blue-white.com to have your password reset

12.10 System Time

This setting is used to change the local time that is displayed.

To Input The System Time:

1



Select the **Time** in the upper right hand corner

2

Select **Desired Hour**

3

Select **Desired Minute**

4


Select **AM or PM**

5



Confirm by pressing **OK**

12.11 Display Flow Rate / RPM / % Motor Speed / Remote input (4-20 mA input / Hz / Pulses)

To change the display between Flow Rate, RPM, % Motor Speed, or Remote input (4-20 mA, Hz frequency, or # of pulses), press the display where value is shown. The display value will change with each press.

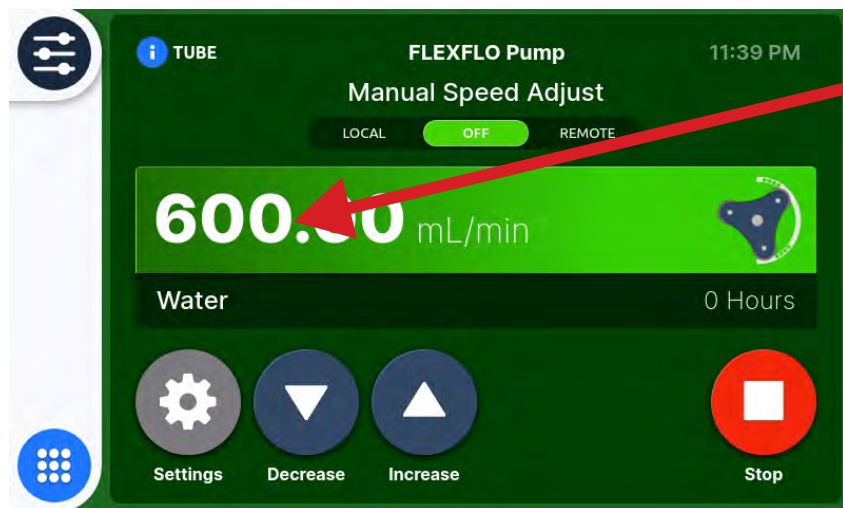

Press here to change display

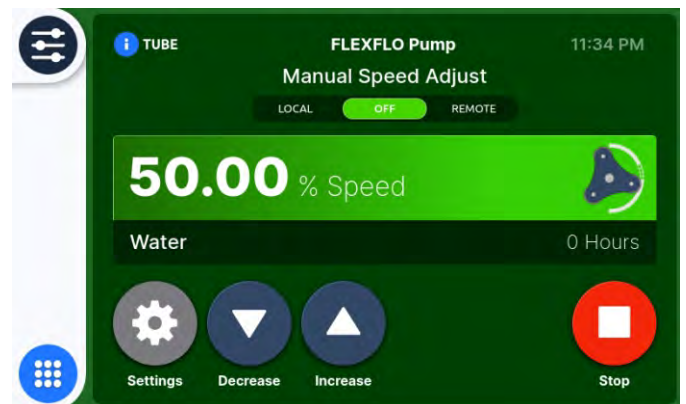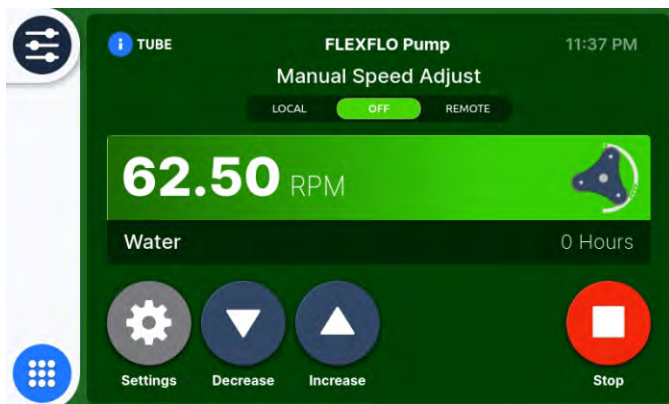

13.1 SYSTEM INFORMATION

This is to view the System Information

Information to be displayed:

- Pump Name
- Chemical Name
- Firmware Version
- System Build
- Manufactured Data & Time
- Serial Number
- Model
- I/O Port Firmware Version
- Motor Firmware Version
- Industrial Protocol Firmware Version
- Lifetime Run Hours

To View The System Information:



Open the **App Drawer**



Select **System Information**

13.2 Firmware Update

To update the firmware for your pump you first need to download and install Blue-Central® which is available at:

<https://www.blue-white.com/resources/>



To Update The System Firmware:

- 1**
Plug pump into a computer via USB A to USB C cable and open Blue-Central® program
- 2**
Select firmware tab and select “Start Upgrade”. (If this is the first time using Blue Central, it may takes a few minutes to download firmware, depending on your internet speed.)
- 3**
The firmware upgrade box will appear showing the progress of the download. (This should take 1-3 minutes)
- 4**
Once the download is complete select “Close” to exit screen.
- 5**
Follow instruction on pump screen to upgrade the firmware. You can choose to update at a later time if the pump is currently running.
- 6**
If you choose to update at a later time, you can initiate the update later by going to the “System” key and selecting “Update” at the bottom of the screen.

CAUTION

Always wear protective clothing, face shield, safety glasses and gloves when working on or near your metering pump. Additional precautions should be taken depending on solution being pumped. Refer to MSDS precautions from your solution supplier.

14.1 Routine Inspection and Maintenance

The pump requires very little maintenance. However, the pump and all accessories should be checked weekly. This is especially important when pumping aggressive chemicals. Inspect all components for signs of leaking, swelling, cracking, discoloration or corrosion. Replace worn or damaged components immediately.

Cracking, crazing, discoloration and the like during first week of operation are signs of severe chemical attack. If this occurs, immediately remove chemical from pump. Determine which parts are being attacked and replace them with parts that have been manufactured using more suitable materials.

14.2 How to Clean and Lubricate the Pump

When changing the pump tube assembly, the pump head chamber, roller assembly and pump head cover should be wiped free of any dirt and debris.



100% silicone lubricant should be applied to the roller assembly for proper maintenance. See option for silicon oil in spare parts.

Refer to www.blue-white.com/resources/videos for roller assembly maintenance video instructions.



Periodically clean the back flow prevention check valve assembly, especially when injecting fluids that calcify such as sodium hypochlorite. These deposits and other build ups can clog the fitting, increasing the back pressure at the pump (reducing tube life) and interfering with check valve operation.

The motor does not require maintenance or lubrication.

CAUTION 	Prior to service, pump clean water through the pump and suction / discharge line to remove chemical.
CAUTION 	Always wear protective clothing, face shield, safety glasses and gloves when working on or near your metering pump. Additional precautions should be taken depending on solution being pumped. Refer to MSDS precautions from your solution supplier.

14.3 Removing Pump Head Cover and Tubing Replacement

The pump requires very little maintenance. However, the pump and all accessories should be checked weekly, and cleaned thoroughly whenever a tube is replaced. This is especially important when pumping aggressive chemicals.



All system pressure must be removed from the pump before proceeding!

1. Ensure safety glasses and gloves are worn during tube replacement.
2. Remove suction and discharge tubing/piping from the pump before proceeding.
3. Remove the **Pump Head Cover** by unscrewing the four **Thumb Screws**. Pull off the **Pump Head Cover**. **Ensuring the pump is mounted securely will help in removing the cover.**
4. The pump will detect that the **Pump Head Cover** is removed and enter MAINTENANCE MODE. **The pump will stop automatically whenever the pump head cover is removed.**
5. Remove the front spacer.
6. Press the **START** button and rotate until one of the rollers is in the 9 O'clock position (for left-facing pump head.) **Rotor will rotate at a maximum of 6 RPM for your safety.**
7. Rotate the **Spider Ring** counterclockwise to allow for removal of rollers.
8. Remove **Roller (pinch or guide)** in the 9 o'clock position by sliding it off the rotor. (Note: If pump head is right facing, the roller to remove will be in the 3 o'clock position.)
9. Repeat process with other 3 rollers.
10. Remove **Tube** and clean pump head and rollers with soapy water. If chemical has leaked into the pump head, consult SDS for chemical cleaning and disposal before proceeding. Use caution and adhere to safety standards while in contact with any chemical. Clean rollers, as necessary. Apply 100% silicon oil to the rollers. Ensure rollers are spinning freely before installing.
11. Install **new Tube**. **Use the natural curvature of the tube when installing. Do not bend, twist or kink the tube.**
12. Install **Roller**, and rotate pump head to install remaining **Rollers**. **Be sure pinch rollers are opposite (180 degrees) of each other.**
13. Once all rollers are installed, tighten the **Spider Ring**, and install the front spacer.
14. Re-attach **Pump Head Cover** with **Thumb Screws**.
15. Confirm Tube replacement and press Save. Pump is now ready for use.

[Click link here or scan QR code for more information on the tube and roller assembly replacement.](#)



14.4 Pump Head and Roller Exploded Views

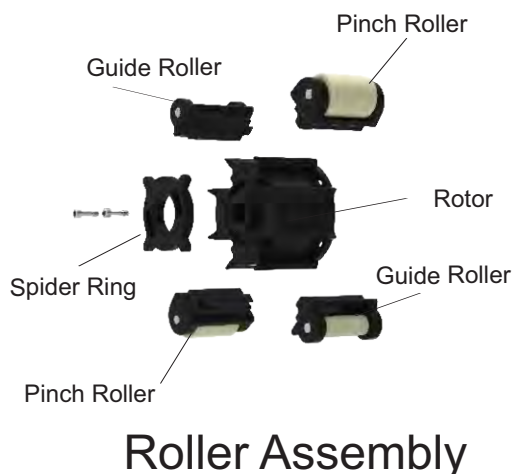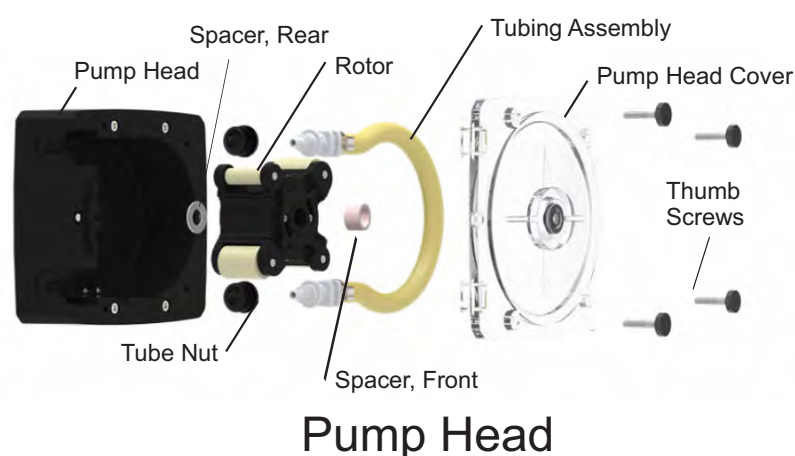

14.5 Peristaltic Tube Assembly Care and Use Guide

- **Blue-White Tube Assemblies are specifically designed, tested, and intended for use only in Blue-White peristaltic pumps.** Users assume the risk of using Blue-White Tube Assemblies for any other purpose.

- **Blue-White peristaltic metering pumps are designed to operate with Tube Assemblies manufactured by Blue-White only.** Use of tubing not manufactured by Blue-White will affect the pump's performance, may damage the pump, and will void the warranty.

- Blue-White Tube Assemblies are designed to function in a specific pump model. Verify that the Tube Assembly used is compatible with the pump before installing.

- There are a variety of Blue-White Tube Assembly options available for each peristaltic pump. **Verify that the Tube Assembly selected is suitable for the application before use.** It is possible the Tube Assembly provided with the pump may not be the best option for your specific application.

Review your application before using the pump. Any change in chemical, flow, pressure, duty, or piping will require re-evaluating the Tube Assembly's fit for purpose.

- We recommend keeping spare Tube Assemblies on site, as the Tube Assemblies are wearable parts and will need periodic replacement. Keep all spare Tube Assemblies in the original packaging and store them in a clean, dry, and temperature-controlled environment out of direct sunlight.

Flex-A-Prene® and Flex-A-Chem® Tube Assemblies have a shelf life of 3 years.

Flex-A-Thane® Tube Assemblies have a shelf life of 1 year.

- Tube Assembly life is highly dependant on pump speed, pressure, and duty. Tube Assemblies may last only a few days/weeks, or can last longer than a year in a specific application. However, Tube Assemblies should be replaced at least once a year. An estimate of Tube Assembly life for a specific application can be provided by contacting the Blue-White factory.

- Contact the Blue-White factory immediately if you are unsure about the use and operation of any Tube Assemblies.

14.6 TFD

This pump is equipped with a Tube Failure Detecting System which is designed to stop the pump and provide an output alarm (see Output menu) in the event pump the tube should rupture and chemical enters the pump head.

This patented system is capable of detecting the presence of a large number of chemicals including Sodium Hypochlorite (Chlorine), Hydrochloric (muriatic) Acid, Sodium Hydroxide, and many others. The system will not be triggered by water (rain, condensation, etc.) or silicone oil (roller and tubing lubricant).

If a TFD alarm occurs, the pump will stop and the screen will turn red with “TFD”



Please refer to Section 14 for instructions on replacing tube and cleaning the pump head. Proper cleaning after tube leaks are critical for maintaining the best possible tube and roller life.

Confirming Chemical Detection

To determine if a chemical will be detected by the system:

1. Remove the pump head cover, and the pump tube and roller assembly.
2. Place a small amount of chemical in the bottom of the pump head that is enough to cover the sensors.
3. Reinstall **only** the pump head cover.
4. Turn on the pump by pressing the START button.

NOTE: If the TFD system **detects** a chemical, the pump will stop after a two-second confirmation period.

NOTE: If the TFD system **does not detect** a chemical, the pump will continue to operate after the confirmation period.


5. Carefully clean the chemical out of the pump head. Ensure to remove all the chemical traces from the sensor probes.
6. Replace the roller assembly and tubing.
7. Reinstall the pump head cover.
8. Follow instructions on pump to clear alarm condition.
9. Restart the pump.

14.7 Predictive Tube Failure Detection (TFD)

This pump is equipped with a Predictive Tube Failure Detection feature that uses tube replacement history to let the operator know when a tube failure may occur. This feature must be activated in the Settings Tab. When activated before any tube failures, the default setting for the installed tube will be used.

When enabled, a warning will be display when a tube is approaching its previous failure threshold. This threshold is based on an average of tube replacement and TFD event history.

To Modify Setting:

1 
Open the **App Drawer**

2 
Open **Settings**

3 
Open Predictive TFD

4
Enable the Alarm


5
Confirm by pressing **Save**

15.1 Replacement Parts

A3/M3 Replacement Parts

Pump Head Components

	Part No.	QTY Req'd
1	Spacer, Rear	90011-184 1
2	Complete Roller Assembly	1
	NGG / NH / NJ / NK / NHL / NEE / TK	A3-SNGG-R
	TH / NKL	A3-STH-R
	ND / NF	A3-SND-R
	GE / GG / GH / GK / G2G	A3-SGE-R
3	Tubing (Reference Tubing Matrix)	1
4	Pump Head Cover (Legacy)	A3-SXX-C 1
	Pump Head Cover (New*)	A3-SXX-C2 1
5	Thumb Screws	90011-183 4
6	Tube Nut, Compression, For 3/8" Tubing	C-330-6 2
N/S	Silicon Oil, 15 ml	A-150 1

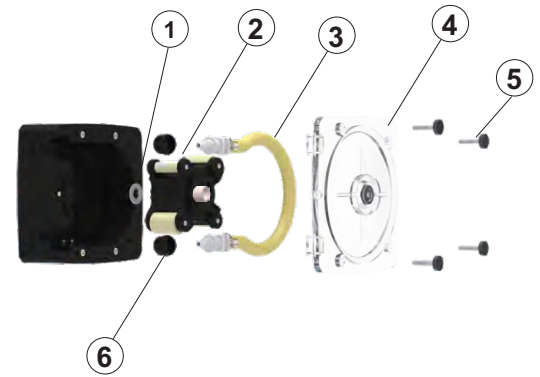


* Pump Head not for sale.
For more information please contact a local sales representative.

* A3-SXX-C2 Cover - use on pumps manufactured after 1/5/26 using .625" motor shaft end.

Roller Assembly Parts

	Part No.	QTY Req'd
7	ROTOR BODY*	N/A 1
8	SPIDER RING*	90002-749 1
9	10-32 CAPTIVE SCREW*	90011-351 2
	*ROTOR ASSY (7, 8, 9 and 12)	A3-SXX-RB 1
10	ARM ROLLER GUIDE	71010-960 2
11	ARM ROLLER	
	NGG / NH / NJ / NK / NHL / NEE / TK	71010-956 2
	TH / NKL	71010-957 2
	ND / NF	71010-958 2
	GE / GG / GH / GK / G2G	71010-959 2
12	Spacer, Front*	76010-177 1

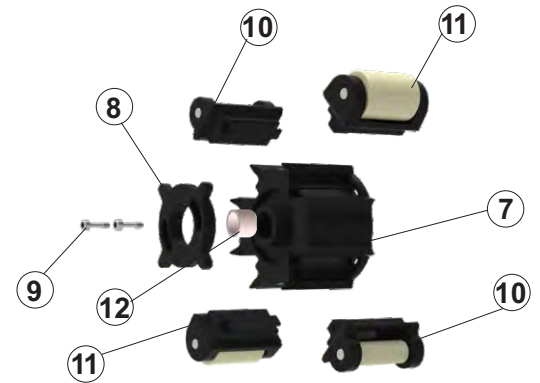

*Available as part of Rotor Assy A3-SXX-RB

Quick Disconnect Fittings

	Part No.	QTY Req'd
Q	Quick Disconnect Fittings	1
	.50" M/NPT FKM	KIT-QMV
	.50" M/NPT EP	KIT-QME
	.50" M/NPT Aflas	KIT-QMA
	.50" Barb FKM	KIT-QBV
	.50" Barb EP	KIT-QBE
	.50" Barb Aflas	KIT-QBA
	3/8" OD, 1/4" ID Tube Compression, FKM	KIT-QSV
	3/8" OD, 1/4" ID Tube Compression, EP	KIT-QSE
	3/8" OD, 1/4" ID Tube Compression, Aflas	KIT-QSA



A

B

Miscellaneous Parts

	Part No.	QTY Req'd
A	SS Mounting Bracket (Standard)	72000-379 1
B	SS Mounting Bracket (Extended)	72000-380 1
C	Rubber Feet	90003-561 4



C

15.2 Tube Replacement

FLEXFLO® A3/M3 Replacement Tube Assembly Part Number

A3	Tubing (for use on A3, A3S, M3 or M3S pumps)					
Inlet/Outlet Connection Size, Connection Type, Connection Material						
S	3/8" OD x 1/4" ID Tube Compression Fitting, Natural PVDF (Kynar)					
M	1/2" Male NPT Fitting, Natural PVDF (Kynar)					
B	1/2" Hose Barb, Natural PVDF (Kynar), available for ND, NEE, NGG, NKL and G2G only					
C	1/2" - 3/4" Tri-clamp connections, Natural PVDF (Kynar), available for ND, NEE, NGG, NKL and G2G only					
Q	Quick Disconnect, Natural PVDF (Kynar), available for ND, NEE, NGG, NKL, and G2G only (valves sold seperately)					
MB	1/2" Male BSPT Fitting, Natural PVDF (Kynar)					
Pump Tube Material, Pump Tube Size						
ND	Flex-A-Prene® .075 ID	NKL	Flex-A-Prene® .375 ID	G2G	Flex-A-Thane® .187 ID (dual tube)	
NEE	Flex-A-Prene® .093 ID (dual tube)	GE	Flex-A-Thane® .125 ID	TH	Flex-A-Chem® .250 ID	
NGG	Flex-A-Prene® .187 ID (dual tube)	GG	Flex-A-Thane® .187 ID	TK	Flex-A-Chem® .375 ID	
NHL	Flex-A-Prene® .250 ID	GH	Flex-A-Thane® .312 ID			
NK	Flex-A-Prene® .375 ID	GK	Flex-A-Thane® .375 ID			
A3	-	S	ND	-	T	Sample Part Number

Output Specifications

Tube Material / Size	Feed Rate			Max Speed	Max Pressure	Max Temperature
	GPH	LPH	mL/Min	RPM	PSI (bar)	°F (°C)
Flex-A-Thane® Tube						
GE	Up to 4.60	Up to 17.4	Up to 290	125	65 (4.5)	130 (54)
GG	Up to 10.1	Up to 38.4	Up to 637	125	65 (4.5)	130 (54)
G2G	Up to 18.23	Up to 69.0	Up to 1150	125	65 (4.5)	130 (54)
GH	Up to 24.9	Up to 94.2	Up to 1570	125	65 (4.5)	130 (54)
GK	Up to 28.5	Up to 108	Up to 1800	125	65 (4.5)	130 (54)
Flex-A-Prene® Tube						
ND	Up to 2.10	Up to 7.92	Up to 132	125	125 (8.6)	185 (85)
NHL	Up to 17.4	Up to 65.8	Up to 1097	125	65 (4.5)	185 (85)
NK	Up to 33.3	Up to 126	Up to 2100	125	125 (8.6)	185 (85)
NKL	Up to 33.3	Up to 126	Up to 2100	125	30 (2.1)	185 (85)
NEE	Up to 4.76	Up to 18.0	Up to 300	125	110 (7.6)	185 (85)
NGG	Up to 19.0	Up to 72.0	Up to 1200	125	110 (7.6)	185 (85)
Flex-A-Chem® Tube						
TH	Up to 15.1	Up to 57.0	Up to 950	125	50 (3.4)	130 (54)
TK	Up to 28.5	Up to 108	Up to 1800	125	50 (3.4)	130 (54)

16.0 ACCESSORIES

The following accessories are available for the A3 FLEXFLO® Peristaltic Metering Pump. Please visit Blue-white.com for more information. All accessories are sold separately.



KIT-M12
TWO M12 CABLES

*KIT-M12-3 for 3 Cables
*KIT-M12-6 for 6 Cables

KIT-M12

Kit contains: Two M12 cables. 10 foot length.

KIT-M12-2-15 15 foot length.
KIT-M12-2-30 30 foot length.

KIT-M12 WIRING INSTRUCTIONS		
DIAGRAM	PIN #	WIRE COLOR
	PIN 1	BROWN
	PIN 2	WHITE
	PIN 3	BLUE
	PIN 4	BLACK
	PIN 5	GRAY

NOTE: THIS DIAGRAM IS FOR THE PUMP'S M12 PORT



CABLE-UAC
USB A-C CABLE

CABLE-UAC

Kit contains: One 3' USB-A to USB-C cable.



KIT-PB3
One 3ft Profibus Cable

KIT-DP3

Kit contains: One 3' profibus cable.



POWER CORDS - DETACHABLE

90010-663 115V/60Hz NEMA 5/15
90010-664 220V/50Hz CEE 7/V11
90010-665 230V/50Hz BS 1363/A
90010-666 240V/50Hz AS 3112
90010-696 230V/60Hz NEMA 6/15
90010-711 115V/60Hz NEMA 5/15 (Lockable)



KIT-QMV
.50" M/NPT QUICK CONNECT

*KIT-QME for EP O-rings

KIT-QMV

Kit contains: One Quick Connect Inlet with .50" M/NPT (assembled with FKM O-rings) and One Quick Connect Outlet with .50" M/NPT (assembled with FKM O-rings)



KIT-QSV
.37" T QUICK CONNECT

*KIT-QSE for EP O-rings

KIT-QSV

Kit contains: One Inlet Quick Connect for 3/8 Tubing (assembled with FKM O-rings), One Outlet Quick Connect with 3/8 Tubing (assembled with FKM O-rings) and Two Tube Nuts.



*KIT-QBE for EP O-rings

KIT-QBV

Kit contains: One Quick Connect Inlet with .50" hose barb connection (assembled with FKM O-rings), One Quick Connect Inlet with .50" hose barb connection (assembled with FKM O-rings) and two #5 Clamps.



KIT-MVM

Kit contains: One Tube Install Tool, One Foot Strainer, One injection valve



KIT-MTVB

Kit contains: 10ft Suction Tube, 10ft Discharge tube, One Tube Install Tool, One Injector fitting, One Foot Strainer, and Two Stainless Steel Clamps #5



KIT-MTVS

Kit contains: 10ft Suction Tube, 10ft Discharge Tube, One Tube Install Tool, One Injection Valve, One Tube Strainer, Two Tube Nuts,



C-342-6

One Tube Strainer 1/4" ID



KIT-PSM

Kit contains: One HDPE Bracket, (4) 3/8" x 2-3/4" long dia anchor bolts.

17.0 TROUBLESHOOTING AND ERROR CODES

The below is a list of common pump issues and error codes. We recommend contacting the factory for support if issues persist or if there are further questions on pump operation. Frequently, a Firmware Update is required when support is requested. Reference the Firmware Update section for details on updating firmware. Do not attempt to open the pump or service internal electrical components. This will void pump warranty.

Common Issues

Air is entering the pump. Check suction lines to make sure all connections are tight. Check the level of the chemical tank. Remove obstructions and clean strainers.

Pump is not accurate. Check the suction line and clean the strainer. Check for obstructions in suction lines, discharge lines, and injectors. Check if suction line conditions have changed. Length of suction line and suction lift will affect flow output. Check the roller and tube for wear.

The pump is not running. Check if the pump is waiting for a remote start/stop signal. Or make sure the Start arrow is pressed and the pump is Ready. If the pump is in 4-20ma mode or Frequency input mode, check the incoming signals at the pump to make sure the pump is receiving the proper signal, and ensure the cables are connected to the correct inputs at the rear of the pump.

Electricals

The pump will not power up. Check the power source or try a different power source. Check to ensure the power cable is properly inserted in the power receptacle of the pump. Confirm power switch on back of pump is "On".

The Remote Start/Stop is turning on/off or chattering. Check the M12 cable's integrity and proper connection to the pump. Check that all signal cables are shielded and properly grounded. Ensure signal wiring is not located or run next to high voltage power or equipment generating EMI. Ensure power wiring to the pump is clean/conditioned.

The 4-20mA signal is dropping or incorrect. Check the M12 cable's integrity and proper connection to the pump. Ensure the 4-20mA signal is powered via 15-24VDC. Check that all signal cables are shielded and properly grounded. Ensure signal wiring is not located or run next to high voltage power or equipment generating EMI. Ensure power wiring to the pump is clean/conditioned.

The Display reads an Error code. Follow instructions on the pump and contact the factory for assistance. Some error codes may be corrected with a current Firmware Update.

See Next Page for List of Error Codes.

17.0 TROUBLESHOOTING AND ERROR CODES

The below is a list of Error Codes. Frequently, a Firmware Update is required when support is requested. Reference the Firmware Update section for details on updating firmware. Do not attempt to open the pump or service internal electrical components. This will void pump warranty.

Error	Error Description	Firmware	Resolution Options
101	General Error	All	Contact factory for support.
102	Hardware Service Unresponsive	All	Contact factory for support.
103	UI Service Unresponsive	All	Contact factory for support.
104	I/O Board Detection Error	v1.1.11 and up	Contact factory for support.
105	I/O Board Initialization Error	v1.1.11 and up	Contact factory for support.
106	I/O Board Communication Error	v1.1.11 and up	Power cycle pump; Disable Outputs on pump; Contact factory for support.
107	Industrial Protocol Board Detection Error	v1.1.11 and up	Contact factory for support.
108	Industrial Protocol Board Initialization	v1.1.11 and up	Contact factory for support.
109	Industrial Protocol Board Communication	v1.1.11 and up	Contact factory for support.
110	Motor Controller Board Detection Error	v1.1.11 and up	Contact factory for support.
111	Motor Controller Board Initialization Error	v1.1.11 and up	Contact factory for support.
112	Motor Controller Board Communication	v1.1.11 and up	Contact factory for support.
113	Motor Over Current Error	v1.1.11 and up	Pumping into pressure, disconnect discharge line restart pump. Check and clean ball check cartridges. Remove debris from pump head. Contact
114	Motor Input Over Voltage Error	v1.1.11 and up	Power cycle pump. Contact factory for support.
115	Motor Input Low Voltage Error	v1.1.11 and up	Power cycle pump. Contact factory for support.
116	Motor High Temperature Error	v1.1.11 and up	Check ambient temperature within specifications. Power cycle pump.
117	Motor Inverter Fault Error	v1.1.11 and up	Power cycle pump. Contact factory for support.
118	Motor Not Connected Error	v1.1.11 and up	Contact factory for support.
119	Motor Shaft Stalled by Force Error	v1.1.11 and up	Pumping into pressure, disconnect discharge line restart pump. Check and clean ball check cartridges. Remove debris from pump head. Contact factory for support.
120	Motor Invalid Speed Requested Error	v1.1.11 and up	Contact factory for support.
121	Motor Mismatch Checksum Error	v1.1.11 and up	Contact factory for support.
122	Motor Mismatch RPM Detected Error	v1.1.11 and up	Contact factory for support.
201	Industrial Protocol Hardware Init Error	All	Contact factory for support.
202	Industrial Protocol Communication Init	V1.0.9 and below	Update Firmware. Contact factory for support.
203	Industrial Protocol Hardware Error	All	Contact factory for support.
204	Industrial Protocol Communication Error	All	Contact factory for support.
205	Industrial Protocol Host Communication	v1.0.9 and below	Update Firmware. Contact factory for support.
301	Motor Over Current Error	v1.0.9 and below	Update Firmware. Contact factory for support.
302	Motor Input Over Voltage Error	v1.0.9 and below	Update Firmware. Contact factory for support.
303	Motor Input Low Voltage Error	v1.0.9 and below	Update Firmware. Contact factory for support.
304	Motor High Temperature Error	v1.0.9 and below	Update Firmware. Contact factory for support.
305	Motor Inverter Fault Error	v1.0.9 and below	Update Firmware. Contact factory for support.
306	Motor Not Connected Error	v1.0.9 and below	Update Firmware. Contact factory for support.
307	Motor Shaft Stalled by Force Error	v1.0.9 and below	Update Firmware. Contact factory for support.
308	Motor Invalid Speed Requested Error	v1.0.9 and below	Update Firmware. Contact factory for support.
309	Motor Communication Timed Out Error	v1.0.9 and below	Update Firmware. Contact factory for support.
310	Four Twenty Module Initialization Error	All	Contact factory for support.
311	Capture Module Initialization Error	All	Contact factory for support.
312	I/O Board Host Communication Error	v1.0.9 and below	Update Firmware. Contact factory for support.
313	Motor Mismatch RPM Detected Error	v1.0.9 and below	Update Firmware. Contact factory for support.
314	Motor Mismatch Checksum Error	v1.0.9 and below	Update Firmware. Contact factory for support.

18.0 WARRANTY

18.1 LIMITED WARRANTY

Your new FLEXFLO pump is a quality product and is warranted for 24 months from date of purchase (proof of purchase is required). The pump will be repaired or replaced at our discretion. Failure must have occurred due to defect in material or workmanship and not as a result of operation of the product other than in normal operation as defined in the pump manual. Warranty status is determined by the pump's serial label and the sales invoice or receipt. The serial label must be on the pump and legible. The warranty status of the pump will be verified by Blue-White or a factory authorized service center.

Pump Head and roller assembly is warranted against damage from chemical attack when proper TFD (Tube Failure Detection) system instructions and maintenance procedures are followed.

18.2 WHAT IS NOT COVERED

- Pump Tube Assemblies and rubber components – They are perishable and require periodic replacement.
- Pump removal, or re-installation, and any related labor charge.
- Freight to the factory, or service center.
- Pumps that have been tampered with, or in pieces.
- Damage to the pump that results from misuse, carelessness such as chemical spills on the enclosure, abuse, lack of maintenance, or alteration which is out of our control.
- Pumps damaged by faulty wiring, power surges or acts of nature.

18.3 PROCEDURE FOR IN WARRANTY REPAIR

Contact the factory to obtain a RMA (Return Material Authorization) number. Carefully pack the pump to be repaired. It is recommended to include foot strainer and injection/check valve fitting since these devices may be clogged and part of the problem. Please enclose a brief description of the problem as well as the original invoice or sales receipt, or copy showing the date of purchase. Prepay all shipping costs. COD shipments will not be accepted. Warranty service must be performed by the factory or an authorized service center. Damage caused by improper packaging is the responsibility of the sender. When In-Warranty repair or replacement is completed, the factory pays for return shipping to the dealer or customer.

18.4 PRODUCT USE WARNING

Blue-White products are manufactured to meet the highest quality standards in the industry. Each product instruction manual includes a description of the associated product warranty and provides the user with important safety information. Purchasers, installers, and operators of Blue-White products should take the time to inform themselves about the safe operation of these products. In addition, Customers are expected to do their own due diligence regarding which products and materials are best suited for their intended applications. Blue-White is pleased to assist in this effort but does not guarantee the suitability of any particular product for any specific application as Blue-White does not have the same degree of familiarity with the application that the customer/end user has. While Blue-White will honor all of its product warranties according to their terms and conditions, Blue-White shall only be obligated to repair or replace its defective parts or products in accordance with the associated product warranties. **BLUE-WHITE SHALL NOT BE LIABLE EITHER IN TORT OR IN CONTRACT FOR ANY LOSS OR DAMAGE WHETHER DIRECT, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL, ARISING OUT OF OR RELATED TO THE FAILURE OF ANY OF ITS PARTS OR PRODUCTS OR OF THEIR UNSUITABILITY FOR A GIVEN PURPOSE OR APPLICATION.**

18.5 CHEMICAL RESISTANCE WARNING

Blue-White offers a wide variety of wetted parts. Purchasers, installers, and operators of Blue-White products must be well informed and aware of the precautions to be taken when injecting or measuring various chemicals, especially those considered to be irritants, contaminants or hazardous. Customers are expected to do their own due diligence regarding which products and materials are best suited for their applications, particularly as it may relate to the potential effects of certain chemicals on Blue-White products and the potential for adverse chemical interactions. Blue-White tests its products with water only. The chemical resistance information included in this instruction manual was supplied to Blue-White by reputable sources, but Blue-White is not able to vouch for the accuracy or completeness thereof. While Blue-White will honor all of its product warranties according to their terms and conditions, Blue-White shall only be obligated to repair or replace its defective parts or products in accordance with the associated product warranties. **BLUE-WHITE SHALL NOT BE LIABLE EITHER IN TORT OR IN CONTRACT FOR ANY LOSS OR DAMAGE, WHETHER DIRECT, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL, ARISING OUT OF OR RELATED TO THE USE OF CHEMICALS IN CONNECTION WITH ANY BLUE-WHITE PRODUCTS.**

19.0 CERTIFICATE OF CONFORMANCE



CERTIFICATION OF CONFORMANCE

This certifies that the product described herein has passed all operational, functional, and accuracy tests in accordance with Blue-White quality assurance procedures and to the best of our knowledge, conforms to all published specifications.

Function	N/A	Pass	Fail
Input/Output			
4-20mA Input	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Frequency Input	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
FVS Input	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Pulse Input	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Dry Contact Primary Input	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Dry Contact Secondary Input	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Pump Head Cover Sensor	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
4-20mA Output	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Frequency Output	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Contact Closure Relay 1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Contact Closure Relay 2	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Contact Closure Relay 3	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Contact Closure High Relay	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Motor Controller Communication	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Internal Hardware			
USB Hub	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
NVRAM	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Industrial Communication			
Ethernet IP	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Modbus TCP	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Profibus	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Miscellaneous			
DC 15 V Output	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
LCD Output	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Ramp Loop 24 H	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Pressure Capability	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Output Capacity	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>

Pump Series:
A3SV24-MNK

Serial Number:
000000008

Technician:
Pump Department

Date/Time:
Apr 1st 2025, 2:12 pm

APPENDIX A: ACRONYMS

°C	Celsius	RMA	Return Material Authorization
°F	Fahrenheit	RPM	Revolutions per minute
AC	Alternating current	SIP	Steam-in-place
bar	Unit of pressure	SS	Solid state
CIP	Clean-in-place	TFD+	Enhanced Tube Failure Detection
cm	Centimeters	TFE/P	Tetrafluoroethylene propylene
COD	Cash on Delivery	UL	Underwriters Laboratories
D	Depth	US	United States
DC	Direct current	V	Volt
EEE	Electrical and electronic equipment	W	Watt
EP	Ethylene propylene	W	Width
ETL	Electrical Testing Labs/Intertek	WEEE	Waste Electrical and Electronic Equipment
EU	European Union		
FDA	Food and Drug Administration		
FKM	Fluoroelastomer		
FVS	Flow Verification Sensor		
GF	Glass fiber		
GPD	Gallons per day		
GPH	Gallons per hour		
H	Height		
Hz	Hertz		
ID	Inside diameter		
IO	Input/Output		
Kg	Kilogram		
lb.	Pound		
LLDPE	Linear low-density polyethylene		
LPH	Liters per hour		
mA	Milliampere		
min	Minute		
mL	Milliliters		
MSDS	Material Safety Data Sheet		
N.C.	Normally Close		
N.O.	Normally Open		
NPT	National Pipe Thread		
NSF	National Sanitation Foundation		
OD	Outside diameter		
P.N.	Part Number		
PBT	Polybutylene Terephthalate		
PE	Polyethylene		
PSI	Pounds per Square Inch		
PVC	Polyvinyl chloride		
PVDF	Polyvinylidene fluoride		
RCD	Residual-current device		
Rev.	Revision		

Model Number Matrix

A3

FLEXFLO® Model Number

A3	FLEXFLO® A3 Peristaltic Metering Pump
-----------	---------------------------------------

Power Cord (operating voltage requirement 96VAC to 264VAC)

4	115V / 60HZ, power cord NEMA 5/15 plug (US)
6	220V / 50HZ, power cord CEE 7/VII plug (EU)
X	No Power Cord

Inlet/Outlet Connection Size, Connection Type, Connection Material

S	3/8" OD x 1/4" ID Tube Compression Fitting, Natural PVDF (Kynar)
M	1/2" Male NPT Fitting, Natural PVDF (Kynar)
B	1/2" ID Tubing Barb Fitting, Natural PVDF (Kynar), available for ND, NEE, NGG, NKL, and G2G only
C	1/2"-3/4" Tri-clamp connections, Natural PVDF (Kynar), available for ND, NEE, NGG, NKL, and G2G only
Q	Quick Disconnect, Natural PVDF (Kynar): ND, NEE, NGG, NKL, and G2G only (Valves sold separately)
MB	1/2" Male BSPT Fitting, Natural PVDF (Kynar)


Pump Tube Material, Pump Tube Size * dual tube

ND	Flex-A-Prene® .075 ID .001-2.1 GPH 125 PSI	GE	Flex-A-Thane® .125 ID .002-4.60 GPH 65 PSI
NEE*	Flex-A-Prene® .093 ID .002-4.76 GPH 110 PSI	GG	Flex-A-Thane® .187 ID .004-10.1 GPH 65 PSI
NGG*	Flex-A-Prene® .187 ID .007-19.02 GPH 110 PSI	G2G*	Flex-A-Thane® .187 ID .007-18.23 GPH 65 PSI
NK	Flex-A-Prene® .375 ID .013-33.3 GPH 125 PSI	GH	Flex-A-Thane® .312 ID .010-24.9 GPH 65 PSI
NKL	Flex-A-Prene® .375 ID .013-33.3 GPH 30 PSI	GK	Flex-A-Thane® .375 ID .011-28.5 GPH 65 PSI
NHL	Flex-A-Prene® .250 ID .006-17.39 GPH 65 PSI	TH	Flex-A-Chem® .250 ID .006-15.06 GPH 50 PSI
		TK	Flex-A-Chem® .375 ID .011-28.5 GPH 50 PSI

Pumphead Orientation

(Blank)	Standard - Left facing pumphead
R	Right facing pumphead
D	Down facing pumphead

A3	S	V	2	4	-	S	ND	Sample Model Number
-----------	----------	----------	----------	----------	----------	----------	-----------	----------------------------

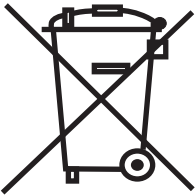

Users of electrical and electronic equipment (EEE) with the WEEE marking per Annex IV of the WEEE Directive must not dispose of end of life EEE as unsorted municipal waste, but use the collection framework available to them for the return, recycle, recovery of WEEE and minimize any potential effects of EEE on the environment and human health due to the presence of hazardous substances. The WEEE marking applies only to countries within the European Union (EU) and Norway. Appliances are labeled in accordance with European Directive 2002/96/EC.

Contact your local waste recovery agency for a *Designated Collection Facility* in your area.

Blue-White[®]

5300 Business Drive
Huntington Beach, CA 92649
USA

TEL: 714-893-8529
FAX: 714-894-9492

www.blue-white.com
sales@blue-white.com
customerservice@blue-white.com